


**EN**    **UNIVERSAL SNOW BLADE MOUNTING PAD INSTALLATION MANUAL**

**DE**    **MONTAGEANLEITUNG FÜR  
UNIVERSAL-SCHNEESCHILD-MONTAGEPADS**




**For: CF Moto CF800-U8 (2013-2022)**


2444.0083.1

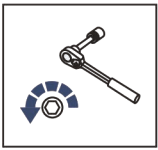


EN Regular fasteners  
DE Originale montageile

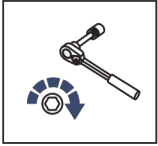


EN Regular fasteners  
DE Originale montageile

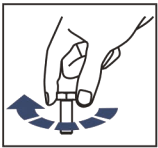


EN Screw a several turns  
DE Für wenigen Umdrehungen befestigen

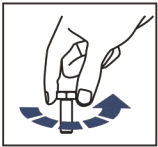

EN Loosen bolts  
DE Bolzen lockern

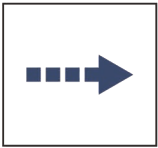

EN Movement Arrow  
DE Bewegungsrichtung

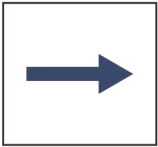






EN Location/Position Arrow  
DE Amordnung/Positionsrichtung



EN Screw Arrow  
DE Drehungsrichtung

	EN Ratchet DE Ratsche		S - 13		EN Drill DE Bohrmaschine		Ø 10
-----------------------------------------------------------------------------------	--------------------------	-----------------------------------------------------------------------------------	--------	-----------------------------------------------------------------------------------	-----------------------------	-------------------------------------------------------------------------------------	------

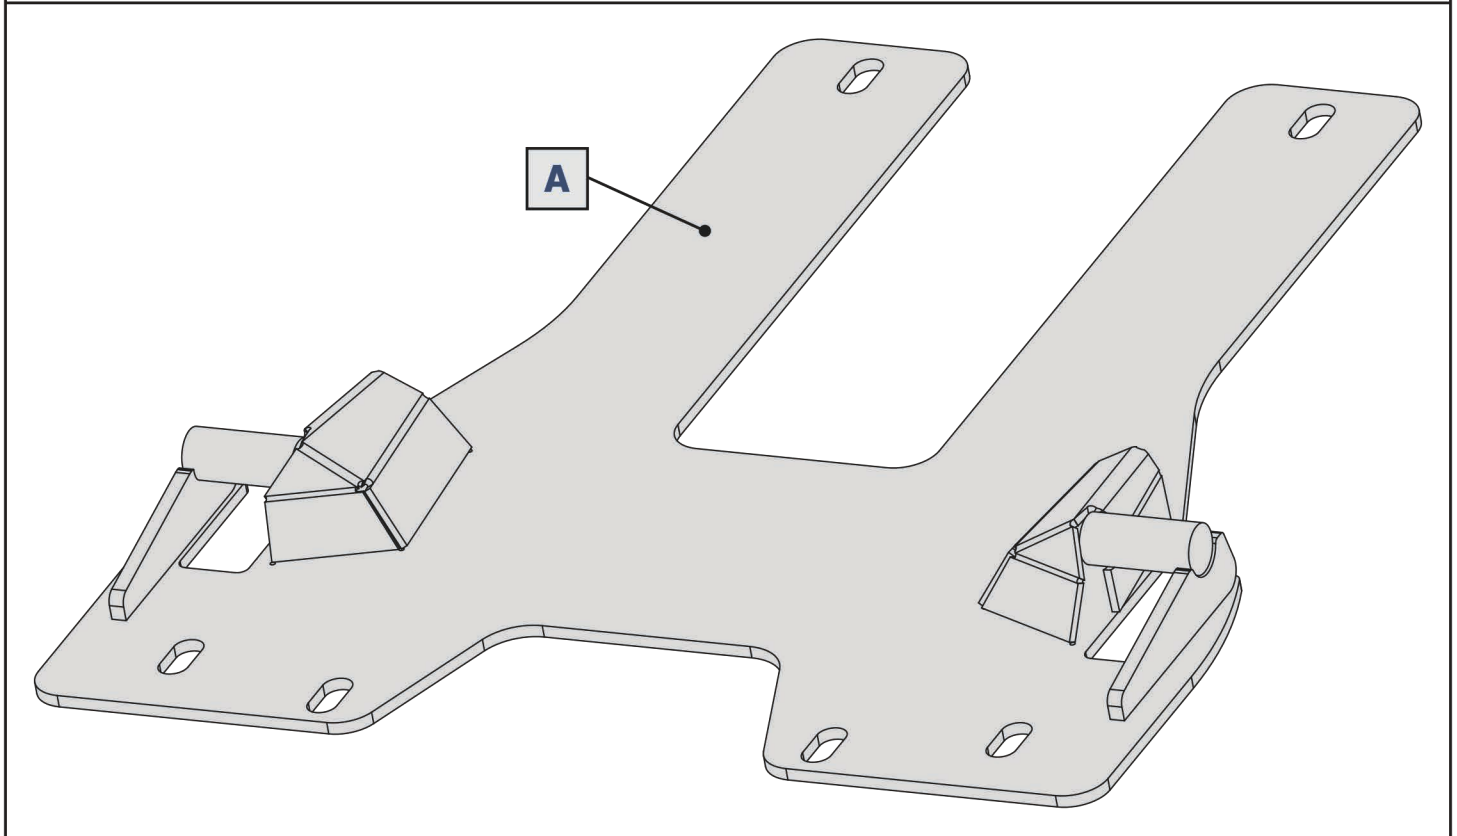
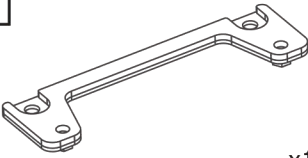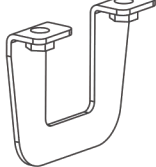
<b>1</b>  x1	<b>2</b>  x2	<b>3</b>  M8x35	<b>4</b>  Ø8	x6
-------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------	----

