

EN

**UNIVERSAL SNOW BLADE MOUNTING PAD
INSTALLATION MANUAL**


DE

**MONTAGEANLEITUNG FÜR
UNIVERSAL-SCHNEESCHILD-MONTAGEPADS**




For: CFMoto ZForce 800 (2013-2022)


2444.0084.1

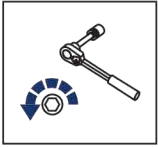


EN Regular fasteners
DE Originale montageile

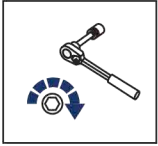


EN Regular fasteners
DE Originale montageile

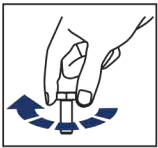


EN Screw a several turns
DE Für wenigen Umdrehungen befestigen

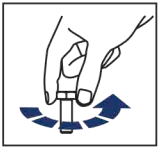

EN Loosen bolts
DE Bolzen lockern

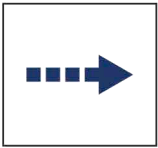




EN Movement Arrow
DE Bewegungsrichtung

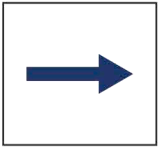


EN Location/Position Arrow
DE Amordnung/Positionsrichtung



EN Screw Arrow
DE Drehungsrichtung


	EN Ratchet DE Ratsche		S - 13		S - 17
---	--------------------------	---	--------	--	--------

1

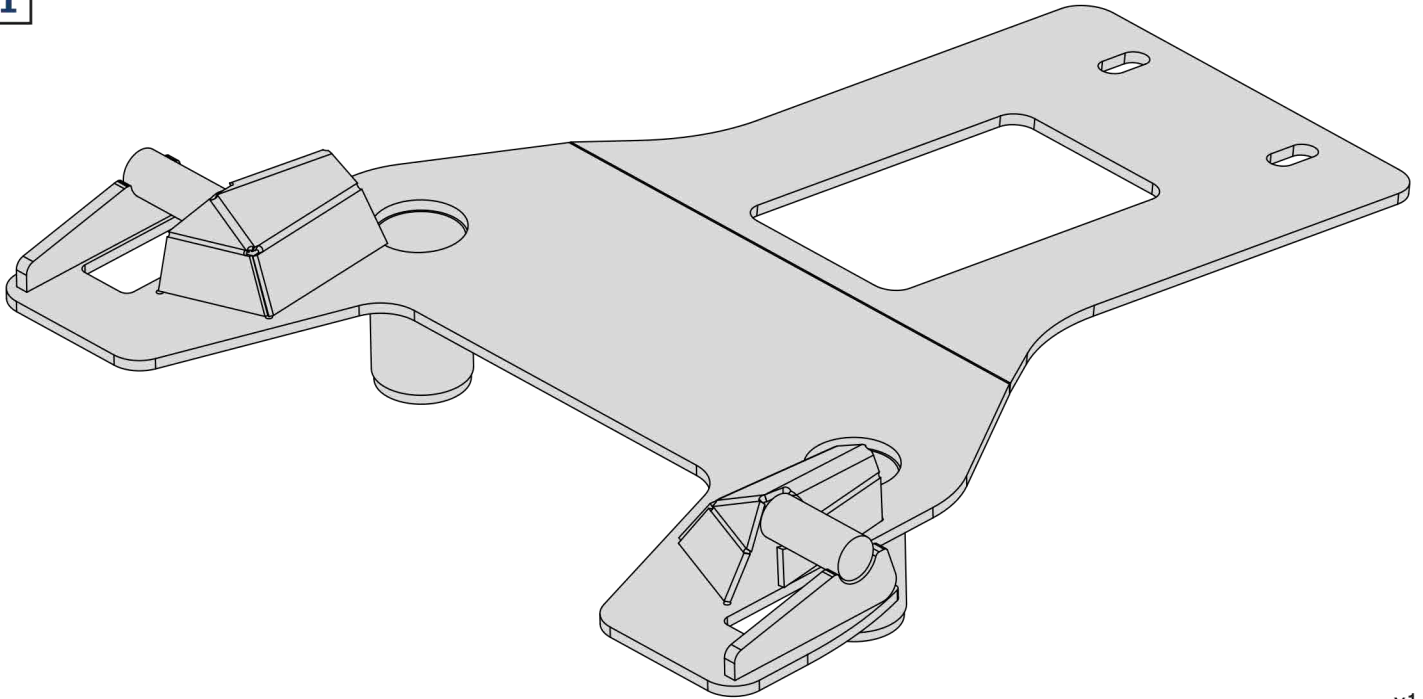


x1

2



x1


3



M10x105/35

x2


4



M8x35

x2

5



M10x35

x2

6



ø8

x2

7



ø10

x2

