

EN **BUMPER KIT INSTALLATION MANUAL**


DE **MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT**




For: CFORCE 800 XC/ 850/ 1000 (2018-2019)
X8 H.O. EPS / X10 EPS (2018-2019)

2444.6857.1



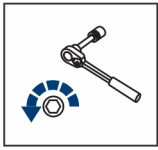

EN Regular fasteners
DE Originale montageile

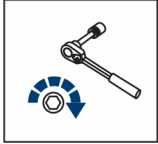


EN Regular fasteners
DE Originale montageile




EN Screw a several turns
DE Für wenigen Umdrehungen befestigen



EN Loosen bolts
DE Bolzen lockern

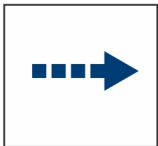

EN Movement Arrow
DE Bewegungsrichtung

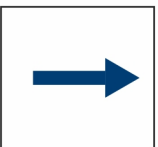

EN Location/Position Arrow
DE Anordnung/Positionsrichtung



EN Screw Arrow
DE Drehungsrichtung

