

EN **INSTALLATION MANUAL FRONT BUMPER**


DE **MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT**




For: CFMOTO CFORCE 400L, 520L (2022-)

2444.6864.1




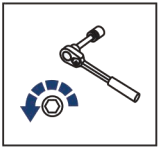

EN Regular fasteners
DE Originale montageile

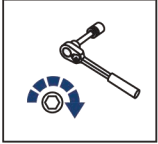


EN Regular fasteners
DE Originale montageile

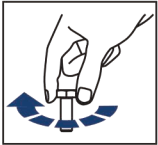


EN Screw a several turns
DE Für wenigen Umdrehungen befestigen



EN Loosen bolts
DE Bolzen lockern

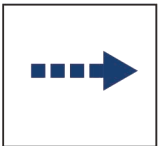



EN Movement Arrow
DE Bewegungsrichtung

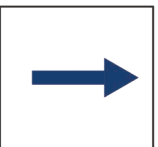






EN Location/Position Arrow
DE Anordnung/Positionsrichtung

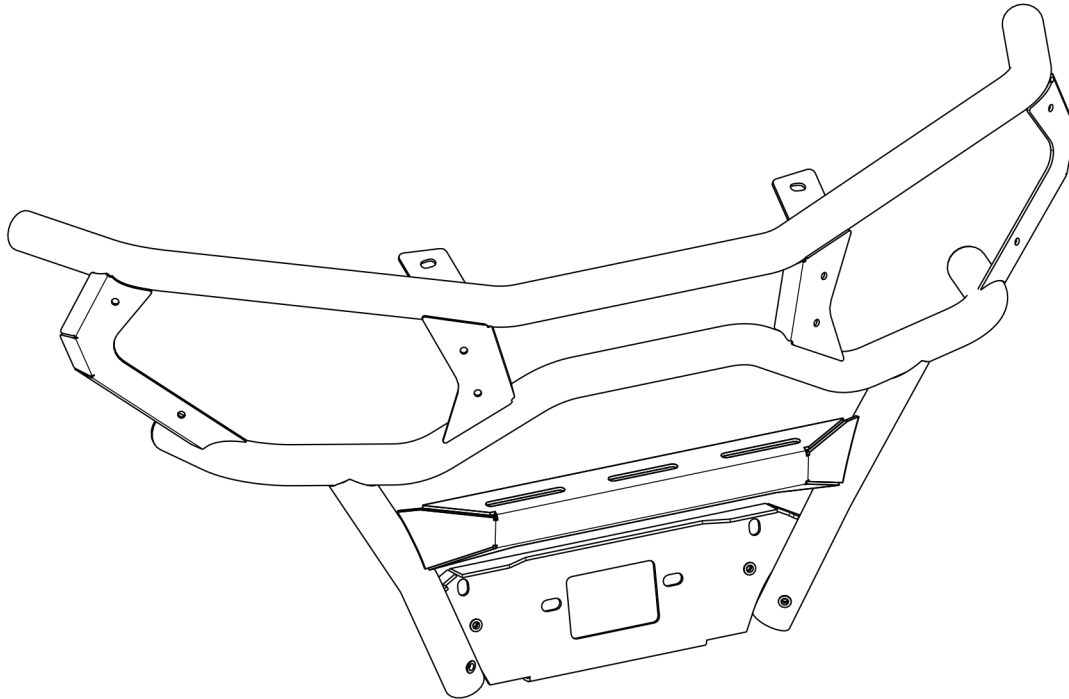

EN Screw Arrow
DE Drehungsrichtung



<p>1</p>  <p>M8x20 x2</p>	<p>2</p>  <p>Ø8 x4</p>	<p>3</p>  <p>M8 x2</p>	<p>4</p>  <p>x1</p>	<p>5</p>  <p>x1</p>
---	--	--	--	---

