

EN REAR BUMPER KIT INSTALLATION MANUAL

DE MONTAGEEINLEITUNG FÜR STOSFÄNGER-KIT


RU ИНСТРУКЦИЯ ПО УСТАНОВКЕ ЗАДНЕГО БАМПЕРА




For: Can-Am Maverick X3 (2017-)

2444.7287.1




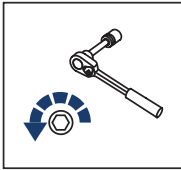


EN Regular fasteners
DE Schraube herausdrehen
RU Штатный крепеж

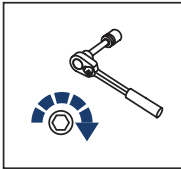


EN Regular fasteners
DE Schraube eindrehen und festziehen
RU Штатный крепеж

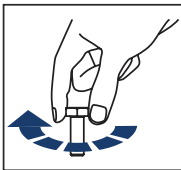


EN Screw a several turns
DE Schraube wenige Umdrehungen eindrehen
RU Вкрутить на несколько оборотов

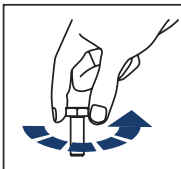

EN Loosen bolts
DE Schraube wenige Umdrehungen lösen
RU Выкрутить на несколько оборотов

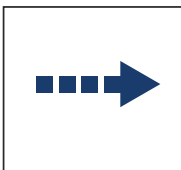


EN Movement Arrow
DE Bewegungsrichtung
RU Движение

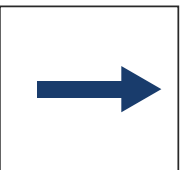


EN Location/Position Arrow
DE Blickrichtung / Postionsrichtung
RU Расположение




EN Screw Arrow
DE Drehrichtung
RU Поворот




EN Ratchet
DE Ratsche
RU Трещётка



S - 17



S - 4

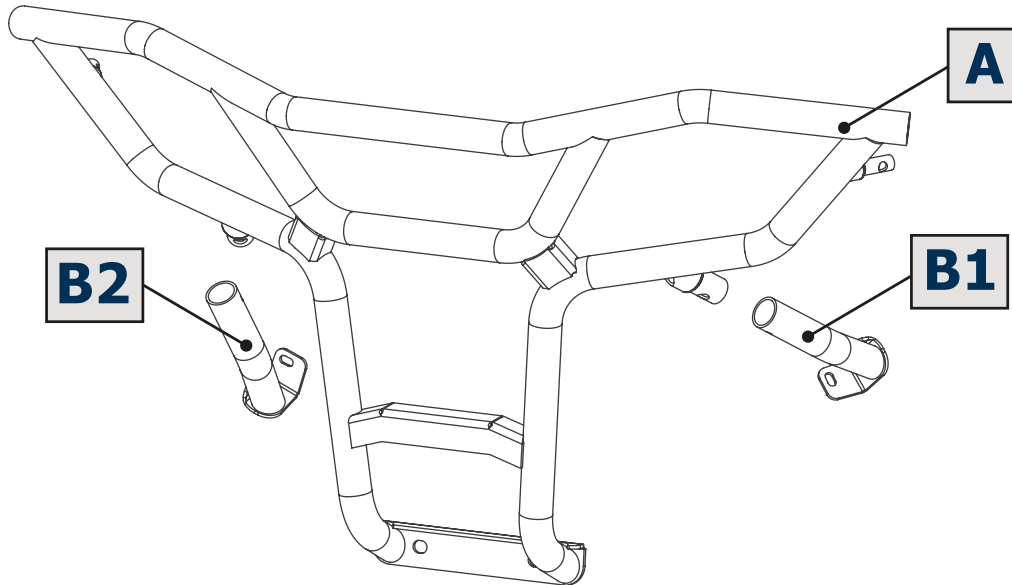

1		2		3		4		5		6	
M6	x2	M6x16	x2	M10x65	x2	Ø6	x2	Ø10	x4	M10	x2

