


## BRP/SSV Maverick X3,X3 MAX(all Models)


**No.:** 444.7244.1 AL Rear bumper  
**Brend:** BRP Can-Am  
**Model:** SSV Maverick X3, X3 MAX (all models)  
**Year:** 2017-  
**Material:** Tube Al 38x3 mm

### Content

1. Bumper.....	1 pc.
2. Upper right-side tube.....	1 pc.
3. Upper right-side tube.....	1 pc.
4. Upper right-side tube.....	1 pc.
5. Upper right-side tube.....	1 pc.
6. Insert nut M6.....	2 pc.
7. Vint M8x35.....	2 pc.
8. Vint M6x16.....	2 pc.
9. Washer 6.....	2 pc.
10. Washer 8.....	4 pc.
11. Bolt M10x65.....	2 pc.
12. Washer 10.....	4 pc.
13. Nut 10.....	4 pc.
14. Nut 8.....	2 pc.

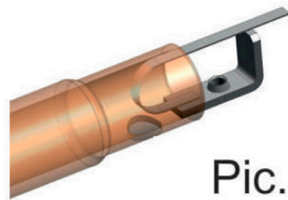

Pic. 1

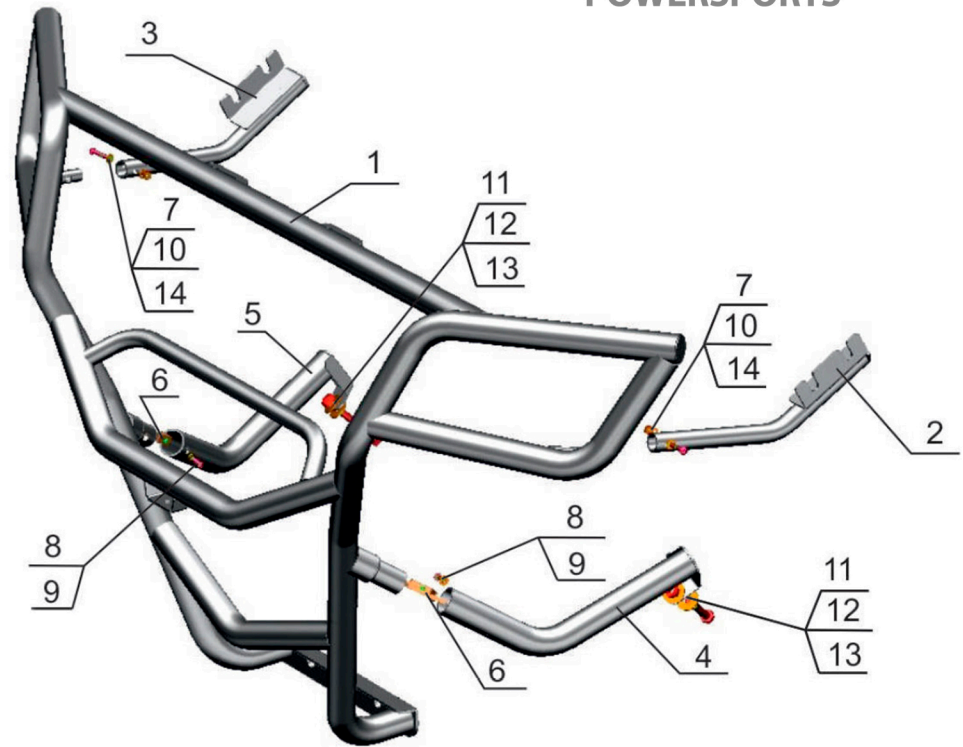

### Installation Instructions


1. Unscrew two nuts from the vehicle frame as shown on pic.2
2. Loosen the bolts which are behind the rear lights as shown on pic.3
3. Mount the side tubes no.2, no.3 (pic.3)
4. Mount middle side tubes no.4, no.5 to the holes shown on pic.4 and then fix them using bolts M10x65 no.11, washers no.12, nuts no.13.
5. Install insert nuts no.6 into the side tubes as shown on pic.1
6. Mount the bumper. Fix it to the upper side tubes no.2, no.3 using screws M8x35 no.7, washers no.10, nuts M8 no.14. Fix to the middle side tubes no.4, no.5 using screws M6x16 no.8, washers no.9, insert nuts M6 no.7. Fix lower part of the bumper using original nuts.
7. Tighten all screws.

#### TOOLS REQUIRED




#### TOOLS REQUIRED



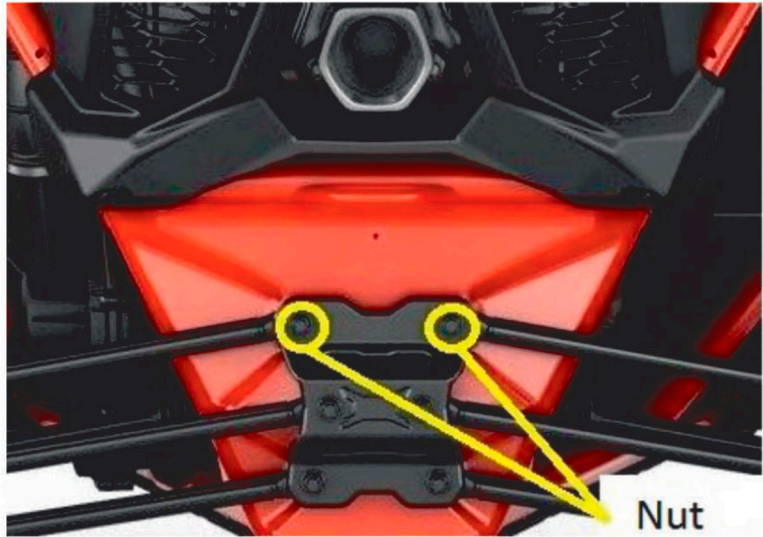

Nut Pic. 2

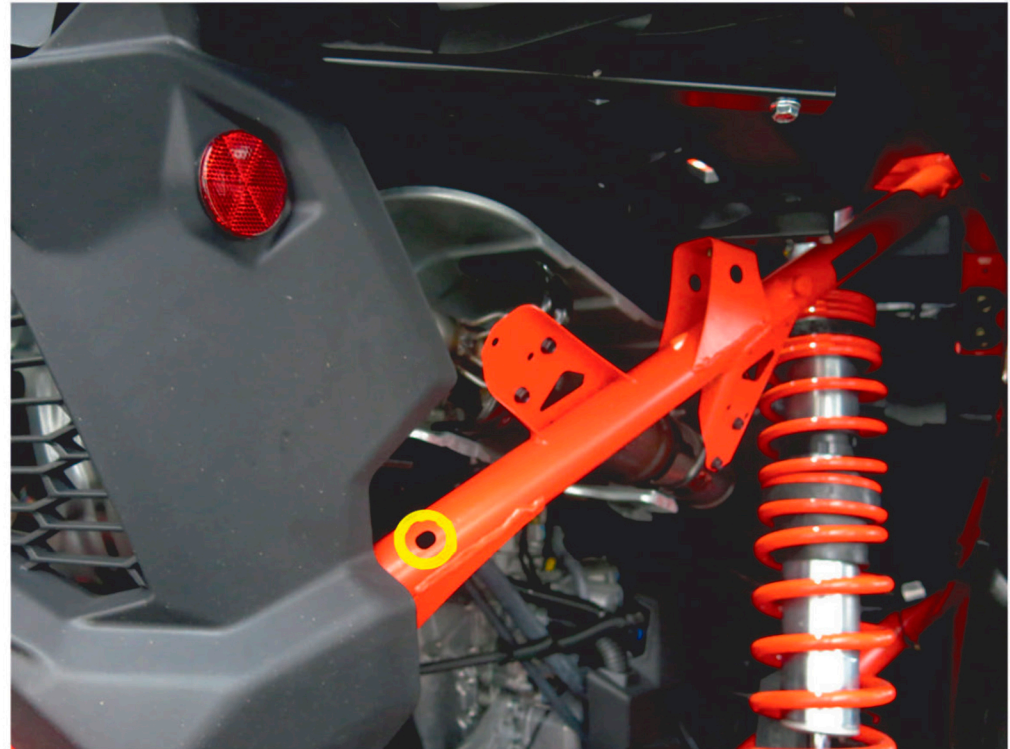

Pic. 4



Pic. 3