

EN BUMPER KIT INSTALLATION MANUAL

DE MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT


RU ИНСТРУКЦИЯ ПО УСТАНОВКЕ БАМПЕРА




**For: BRP SKI-DOO REV Gen4 (Narrow) FREERIDE 154" (2019-) / SUMMIT 154" (2017-)
BRP SKI-DOO SUMMIT / LYNX BOONDOCKER G4 165**

2444.7274.1 / 2444.7262.1
444.7274.1 / 444.7262.1



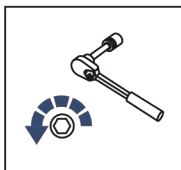

EN Regular fasteners
DE Originale montageile
RU Штатный крепеж

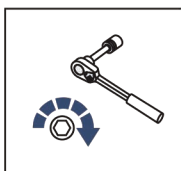


EN Regular fasteners
DE Originale montageile
RU Штатный крепеж




EN Screw a several turns
DE Für wenigen Umdrehungen befestigen
RU Вкрутить на несколько оборотов



EN Loosen bolts
DE Bolzen lockern
RU Выкрутить на несколько оборотов

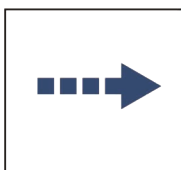



EN Movement Arrow
DE Bewegungsrichtung
RU Движение




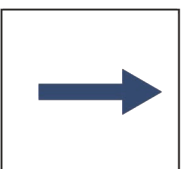




EN Location/Position Arrow
DE Amordnung/Positionsrichtung
RU Расположение




EN Screw Arrow
DE Drehungsrichtung
RU Поворот

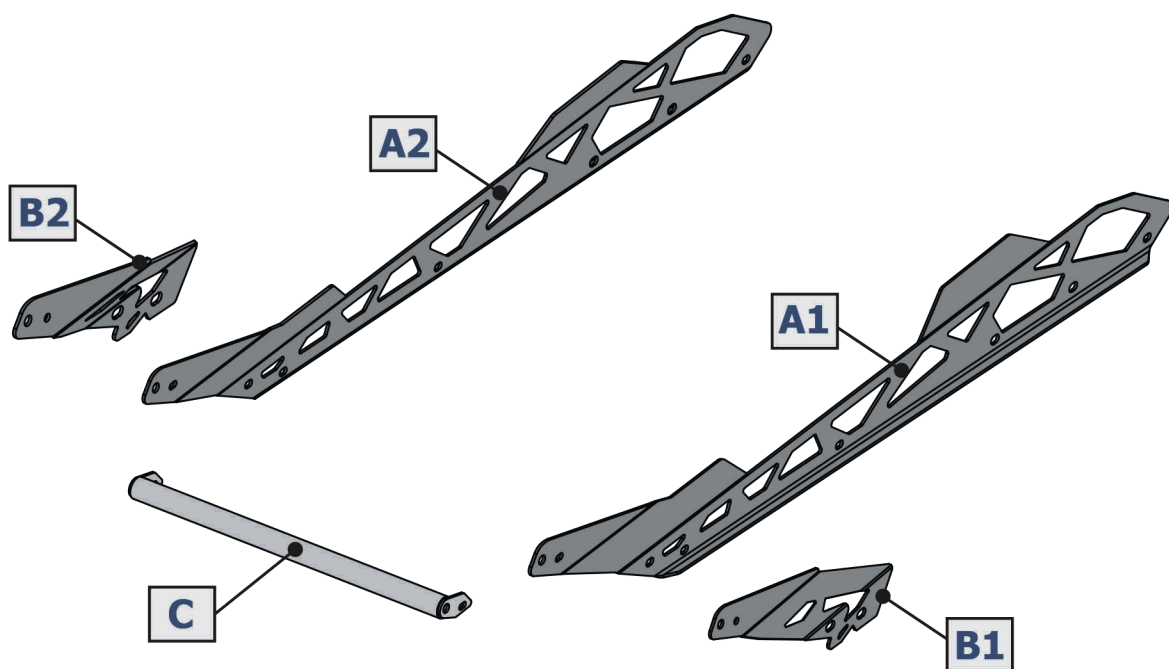

1		x4	2		M6	x14	3		M10x20	x2	4		M6x20	x2	5		M6x30	x4	6		M6x16	x8
7		ø6	x14																			

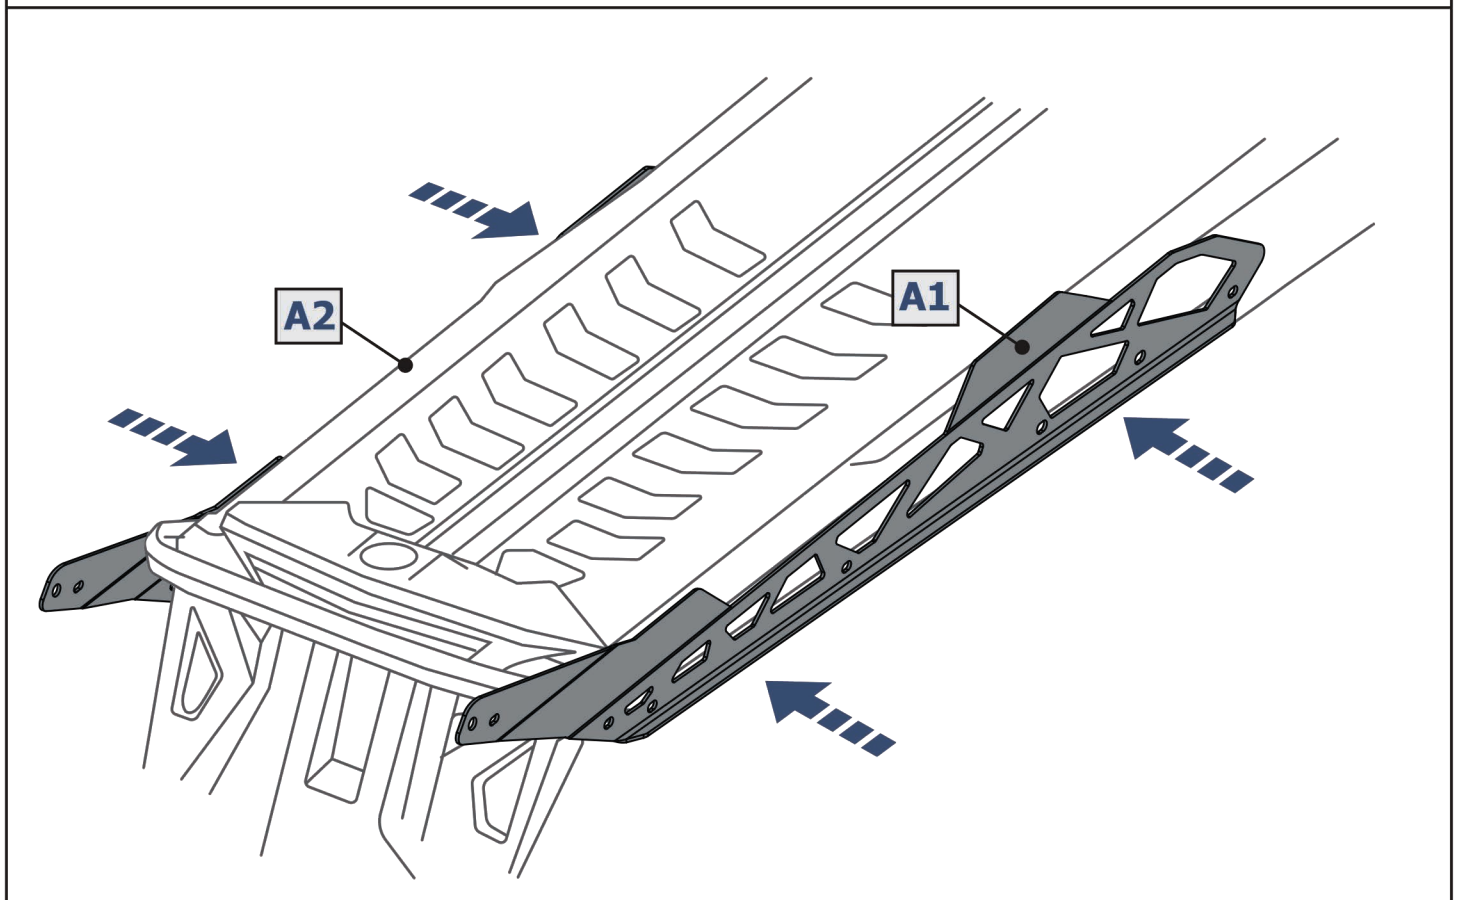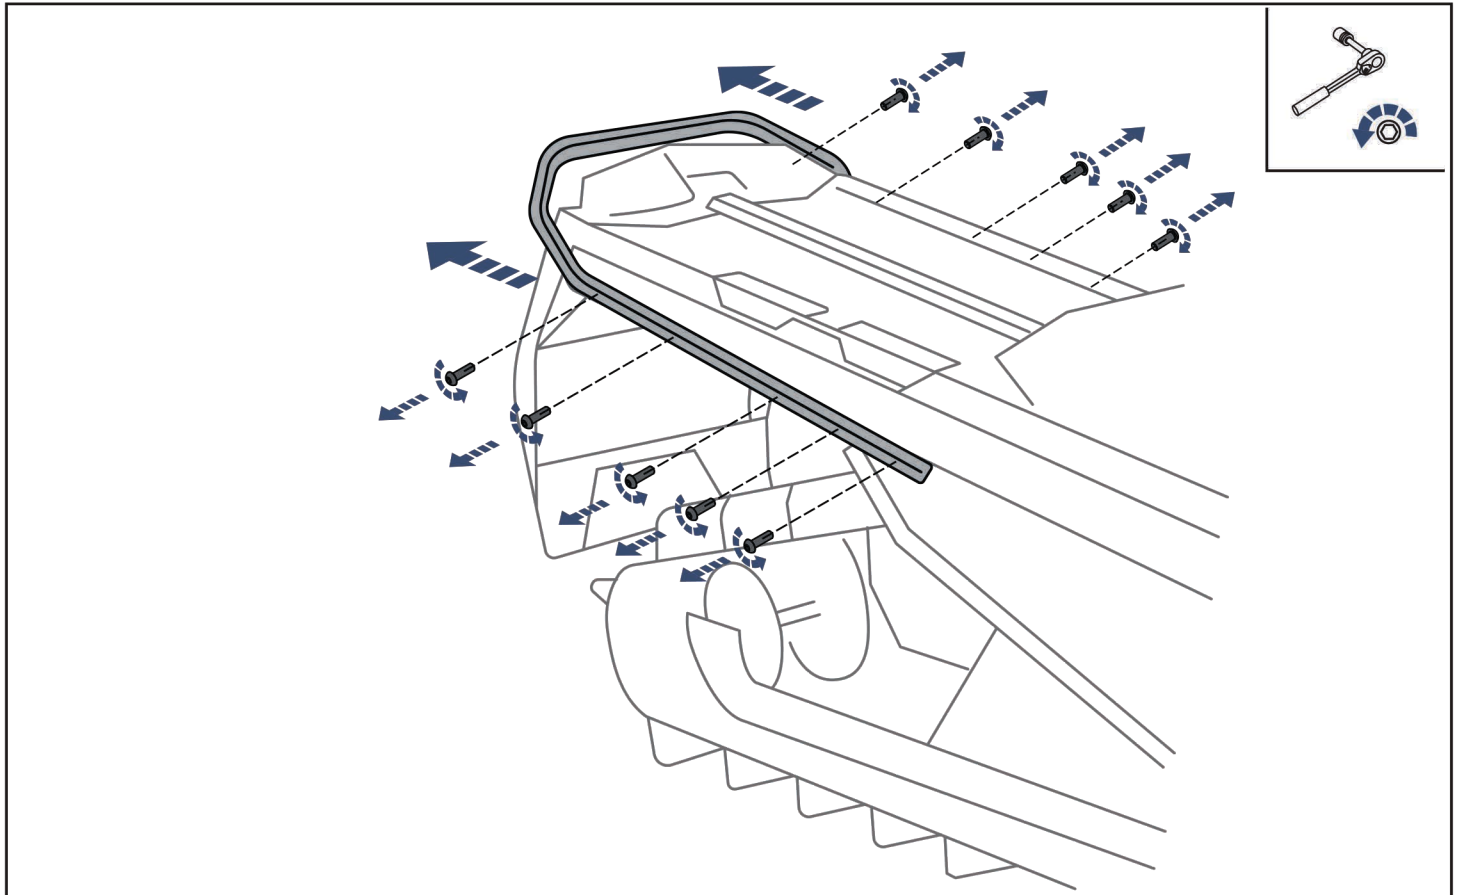

2444.7262.1

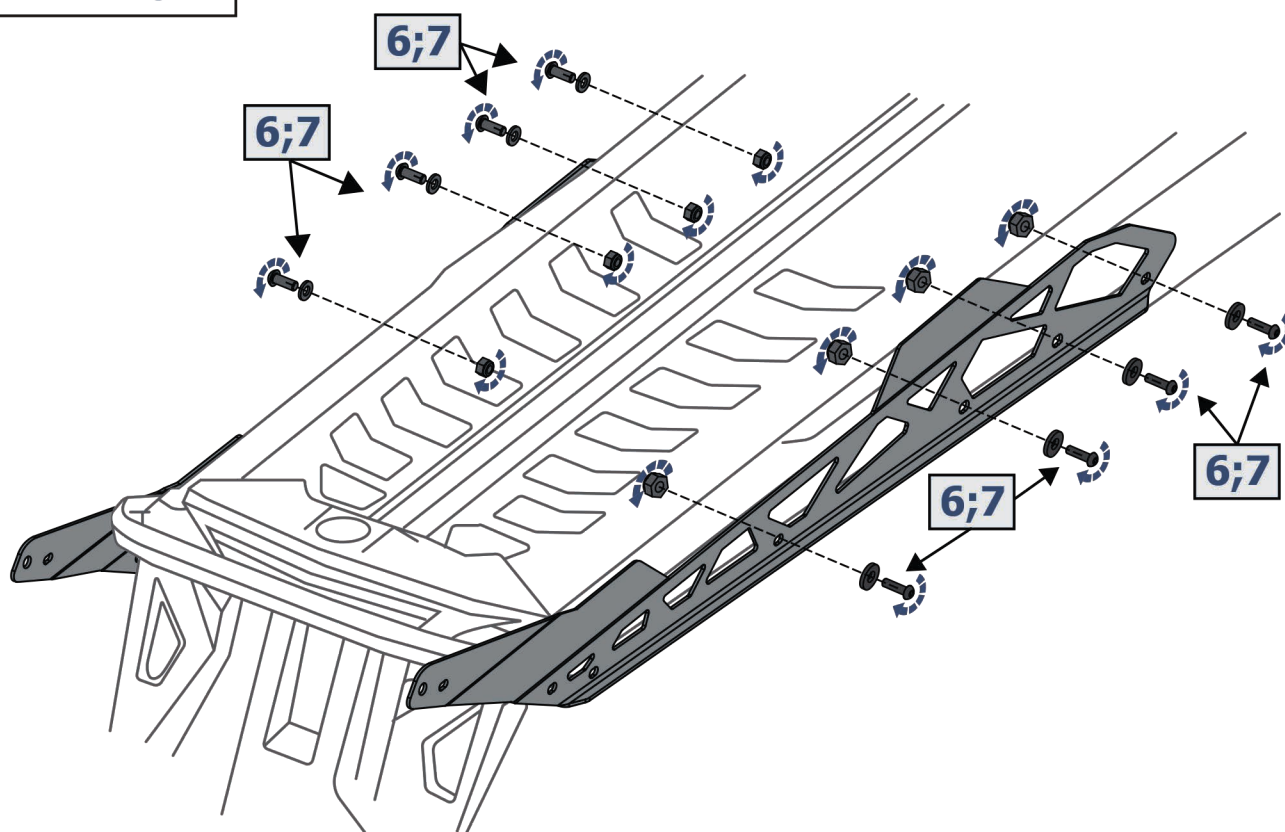

2444.7274.1

