

EN	SKID PLATE INSTALLATION MANUAL
FR	MANUEL D'INSTALLATION DE PLAQUE DE PROTECTION
DE	MONTAGEEINLEITUNG FÜR UNTERBODENSCHUTZSYSTEM
RU	ИНСТРУКЦИЯ ПО УСТАНОВКЕ КОМПЛЕКТА ЗАЩИТ




For: Polaris Sportsman ACE (2011-)


2444.7433.1

444.7433.1





















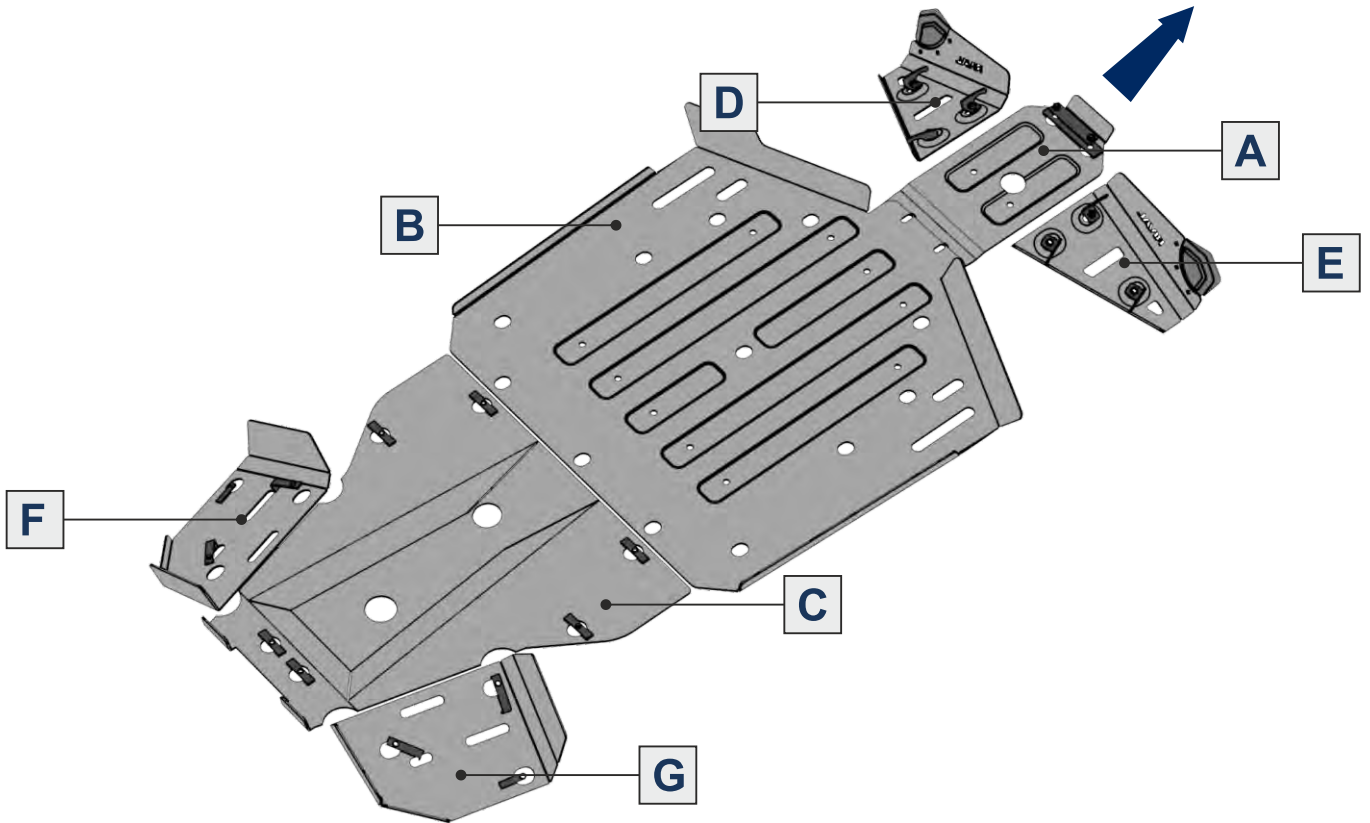


EN Ratchet
FR Clé À Cliquet
DE Ratsche
RU Трещетка



S - 10;
S - 13



1  x1	2  x1	3  M8 x6	4  M8 x4	5  M8 x2	6  x6
7  M6x25 x14	8  M8x25 x14	9  M8x50 x6	10  ∅ 6 x6	11  ∅ 8 x6	12  ∅ 6 x14
13  ∅ 8 x14	14  x6	15  M6 x6	16  ∅ 6 x6	17  x1	18  x1

