


Polaris / Sportsman 450 HO / 570 / Touring 570

Part No.: 2444.7442.1 Front bumper
Brand: Polaris
Model: Sportsman 450 HO / 570 / Touring 570
Year: 2014-
Material: Tube 38x1,5 mm

Content


1. Bumper.....	1 pc.
2. Bracket.....	1 pc.
3. Bush.....	2 pc.
4. Bolt M8x20.....	2 pc.
5. Screw M6x50.....	2 pc.
6. Screw 1/4"x2".....	2 pc.
7. Nut M8.....	2 pc.
8. Washer 8.....	4 pc.
9. Washer 6.....	2 pc.

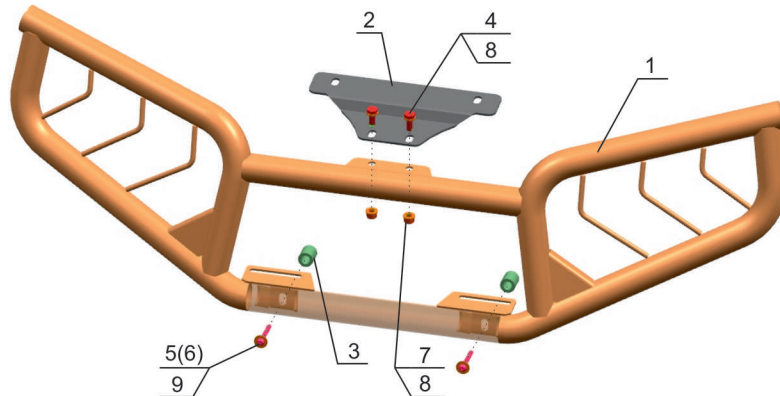

Installation Instructions

1. Unscrew the fasteners of the front rack cover. Install the bracket no.2 and then put the front rack cover back on its place.
2. Place the bumper on the front part of ATV. Fix upper side of the bumper to bracket no.2 using bolts M8x20, washers 8, nuts M8. From lower side, install bushes no.3 under the bumper brackets and then fix the bumper using screws no.5 or no. 6, washers 6.
3. Tighten all screws.

TOOLS REQUIRED



SCREW FORCE

