


Polaris / Sportsman 450 HO / 570 / Touring 570

Part No.: 2444.7443.1 Rear bumper
Brand: Polaris
Model: Sportsman 450 HO / 570 / Touring 570
Year: 2014-
Material: Tube 38x1,5 mm



Content


1. Bumper.....	1 pc.
2. Bolt M8x20.....	6 pc.
3. Nut M8.....	2 pc.
4. Washer 8.....	8 pc.

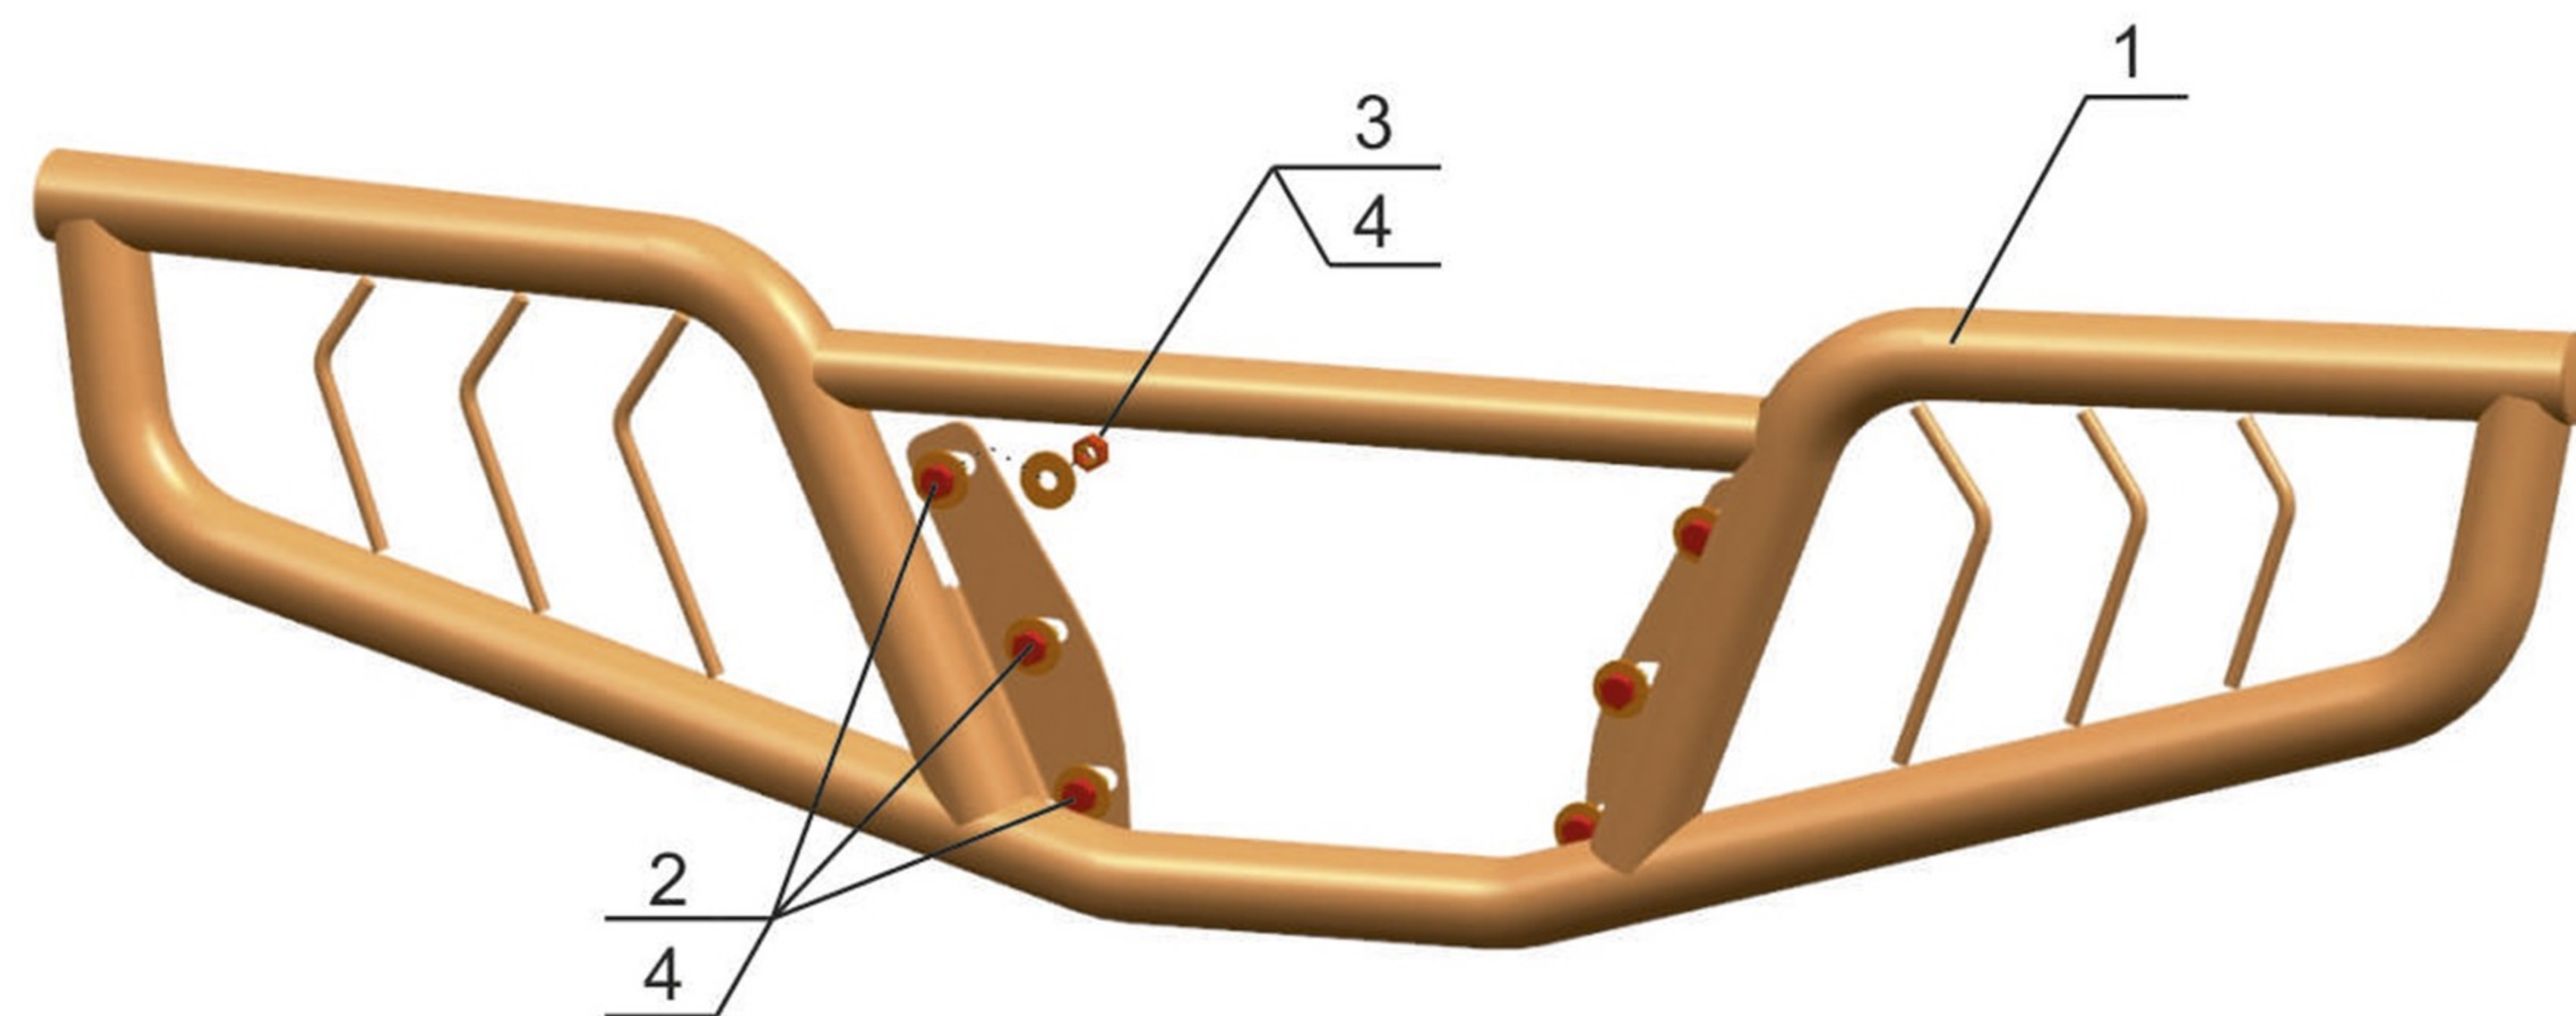


Installation Instructions

1. Mount the rear bumper on back side of ATV. Fix it to original holes using bolts M8x20, washers 8, nuts M8.
2. Tighten all screws.


TOOLS REQUIRED

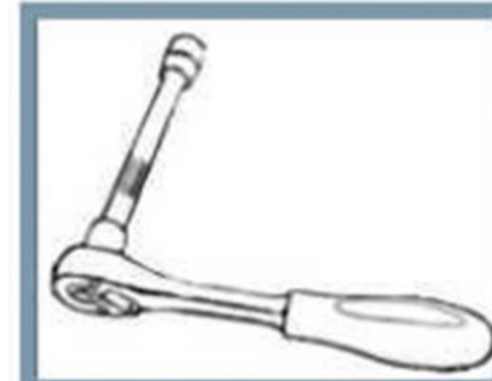




S-13


SCREW FORCE



M6-10 Nm



M8-30 Nm



M10-50 Nm