

EN FRONT BUMPER INSTALLATION MANUAL


DE MONTAGEEINLEITUNG FÜR STOBFÄNGER-KIT

RU ИНСТРУКЦИЯ ПО УСТАНОВКЕ ПЕРЕДНЕГО БАМПЕРА




**For: SKI-DOO EXPEDITION REV GEN5 24" (2025-)
LYNX COMMANDER RADIEN2 24" (2025-)
AODES SNOWCROSS 1000 SWT (2024-)**

444.7655.1

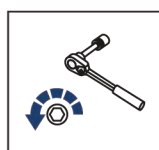

EN Regular fasteners
DE Normale Befestigung
RU Штатный крепёж

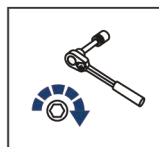


EN Regular fasteners
DE Normale Befestigung
RU Штатный крепёж




EN Screw a several turns
DE Mit wenigen Umdrehungen befestigen
RU Вкрутить на несколько оборотов



EN Loosen bolts
DE Bolzen lockern
RU Выкрутить на несколько оборотов

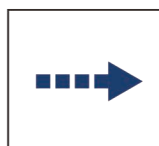


EN Movement Arrow
DE Bewegungsrichtung
RU Движение

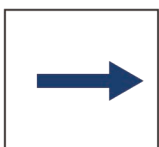


EN Location / Position Arrow
DE Anordnung / Positionsrichtung
RU Расположение










EN Screw Arrow
DE Drehrichtung
RU Поворот

	EN Ratchet DE Ratsche RU Трещётка		S - 10		HEX S - 5 S - 6		EN Drill DE Bohrmaschine RU Дрель		Ø8 Ø9
---	---	---	--------	---	-----------------------	--	---	---	----------


	EN Hand Riveter DE Handnietzange RU Ручной заклёпочник
---	--


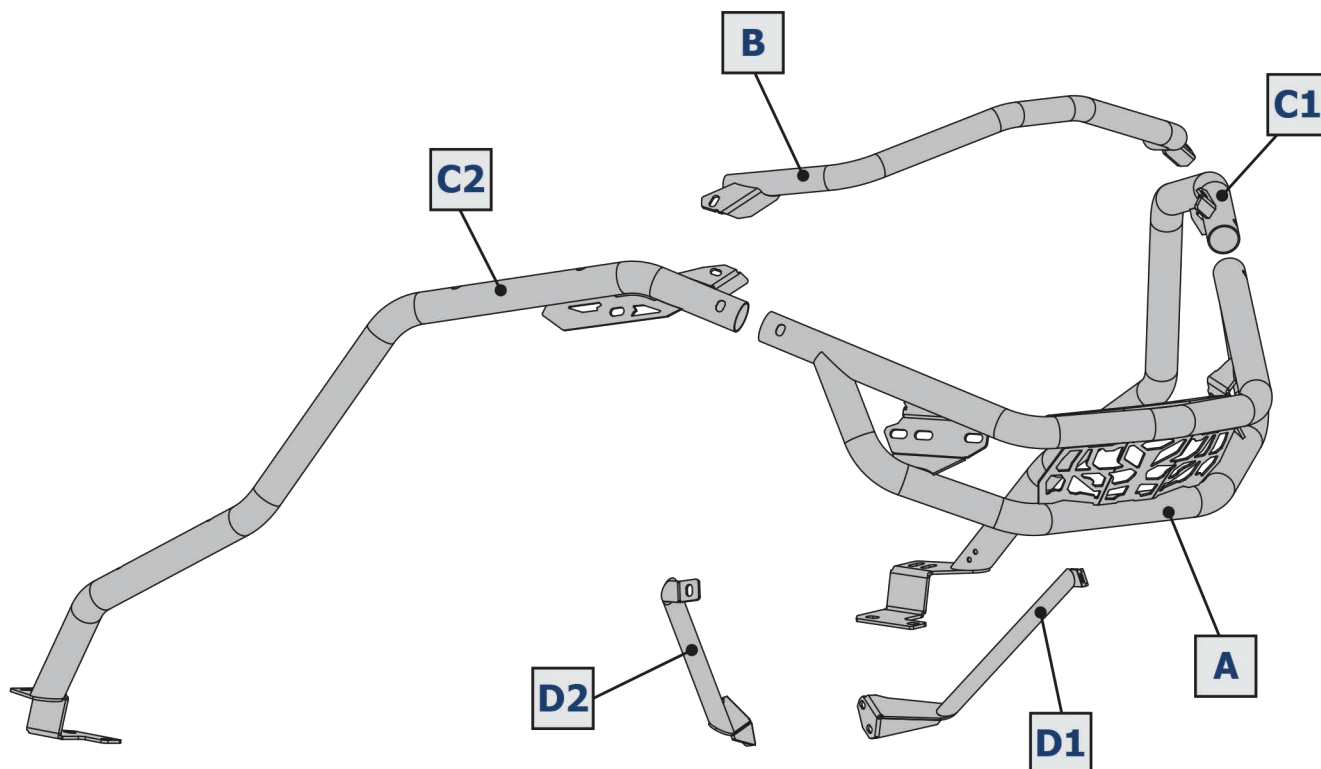


1  x1	2  x1	3  x1	4  x1	5  x1	6  x2
7  M6x45 x4	8  M6x20 x6	9  M6x20 x14	10  Ø6 x36	11  Ø6 x4	12  x2
13  M6 x16	14  x4	15  x4	16  x8		

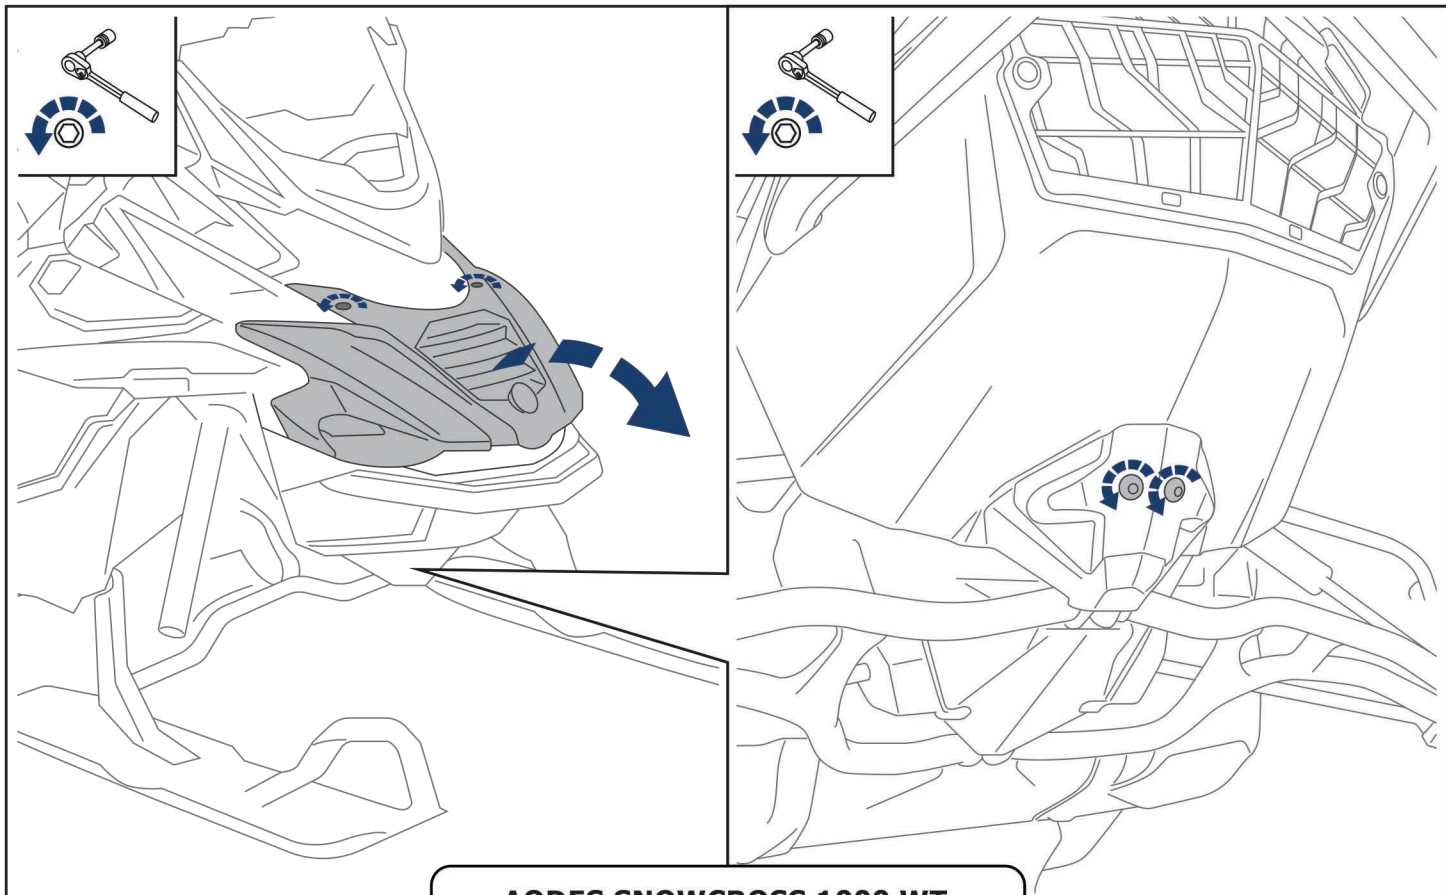



AODES SNOWCROSS 1000 WT

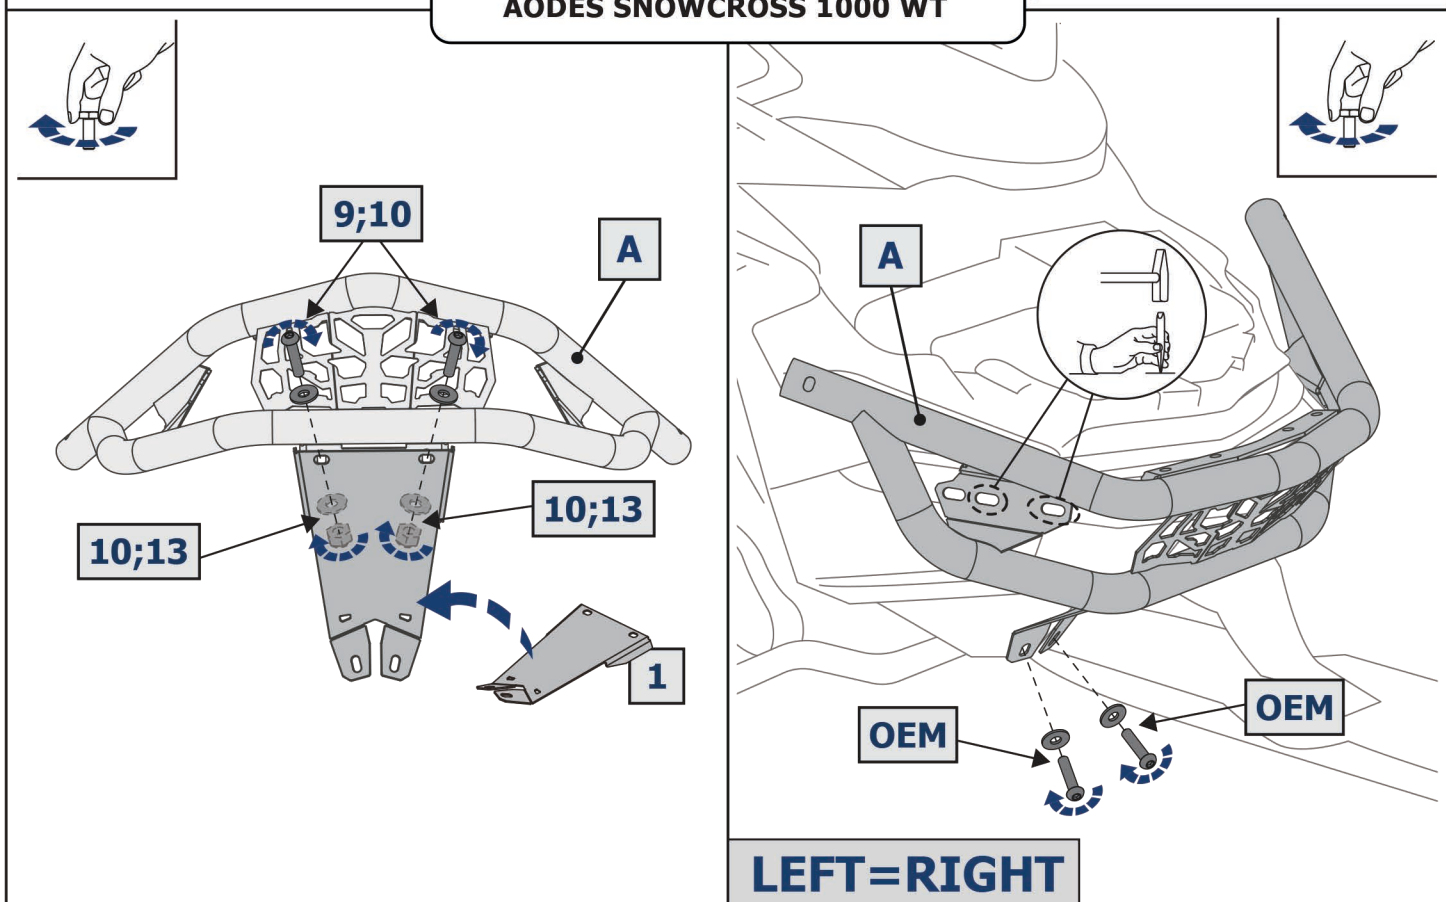

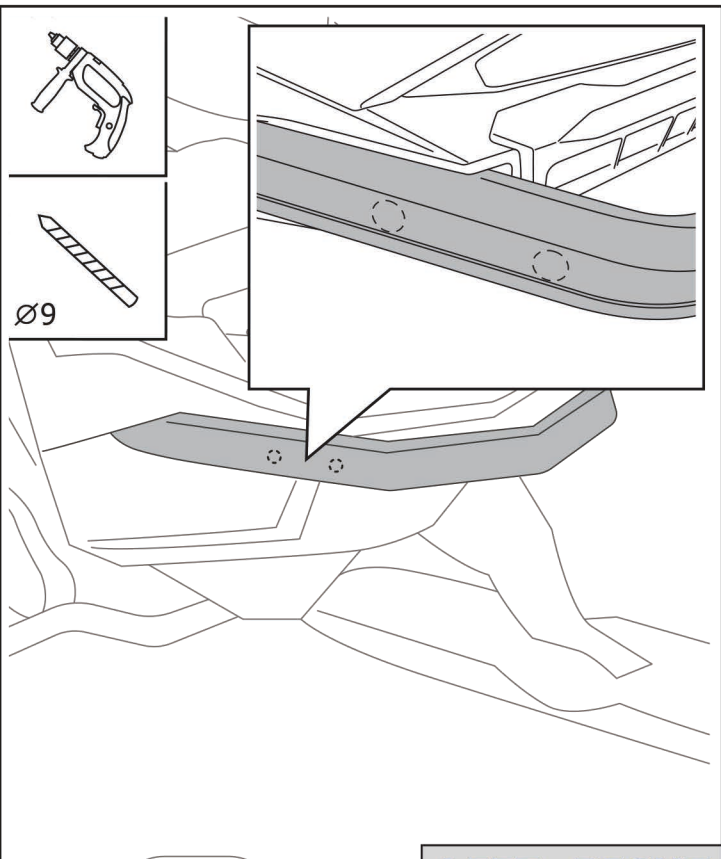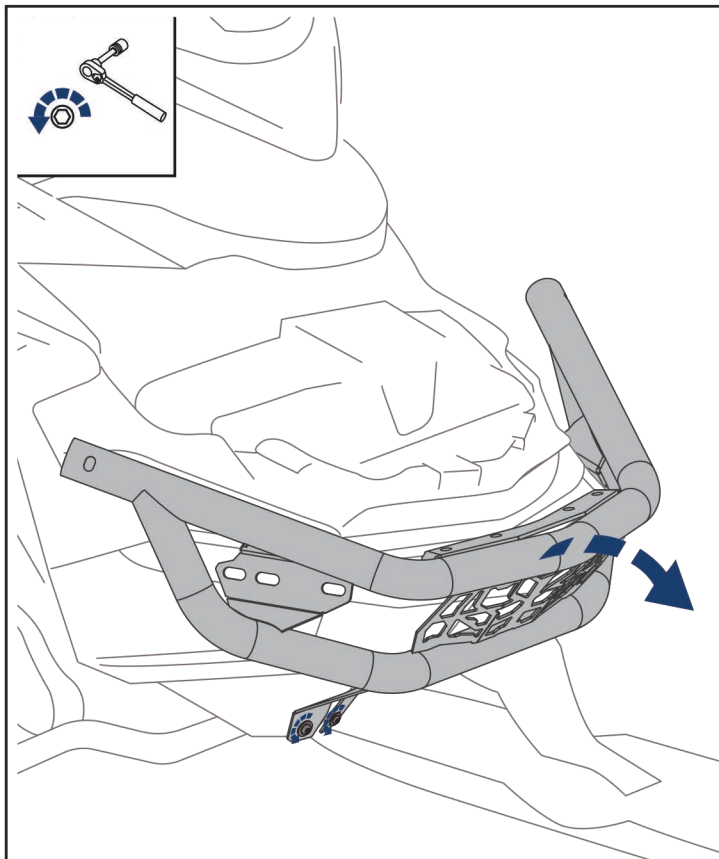



AODES SNOWCROSS 1000 WT

LEFT=RIGHT

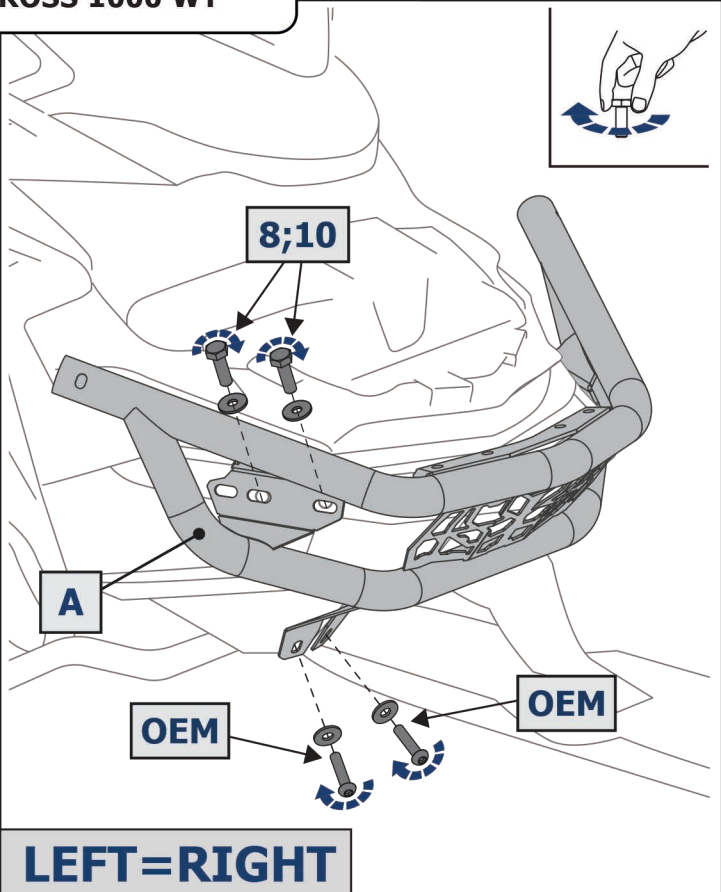
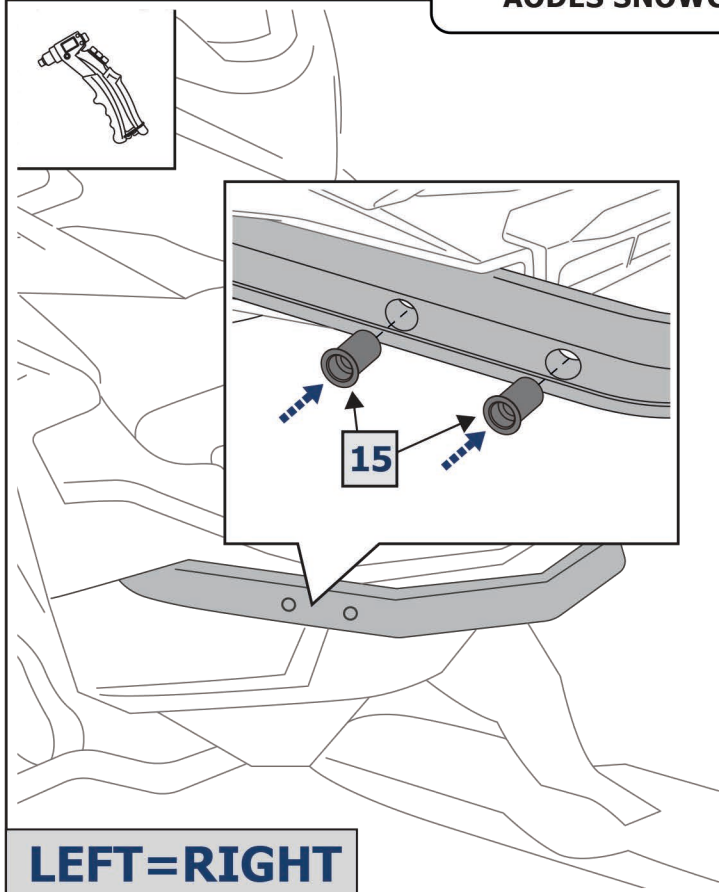



LEFT=RIGHT

LEFT=RIGHT

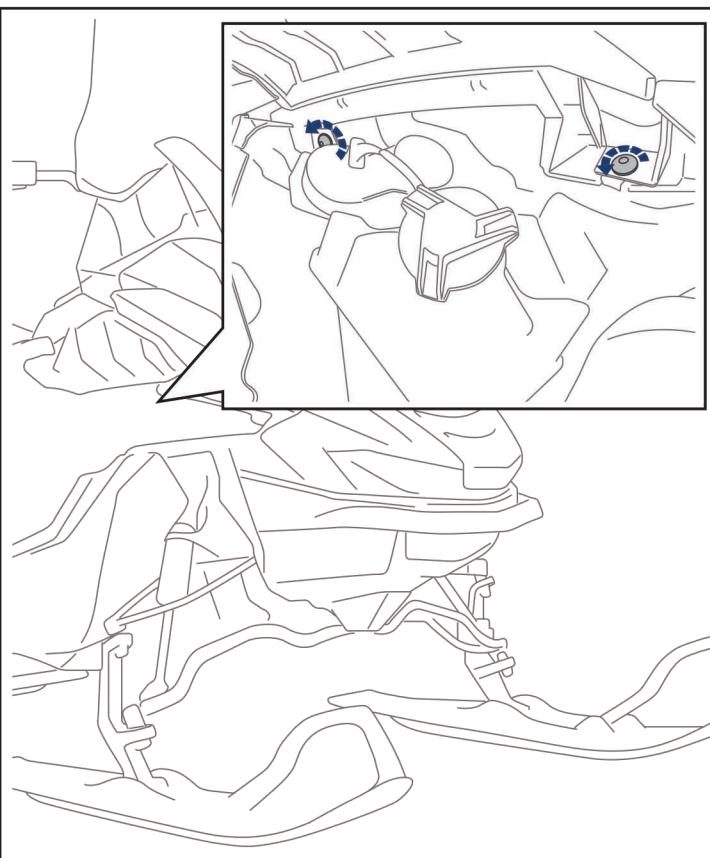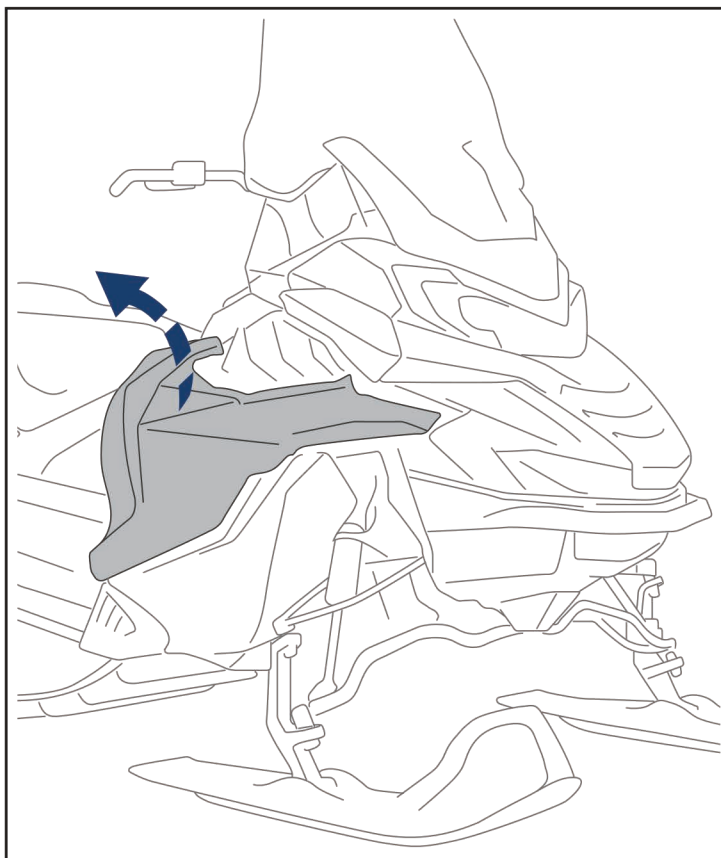


LYNX COMMANDER RADIEN2 20"

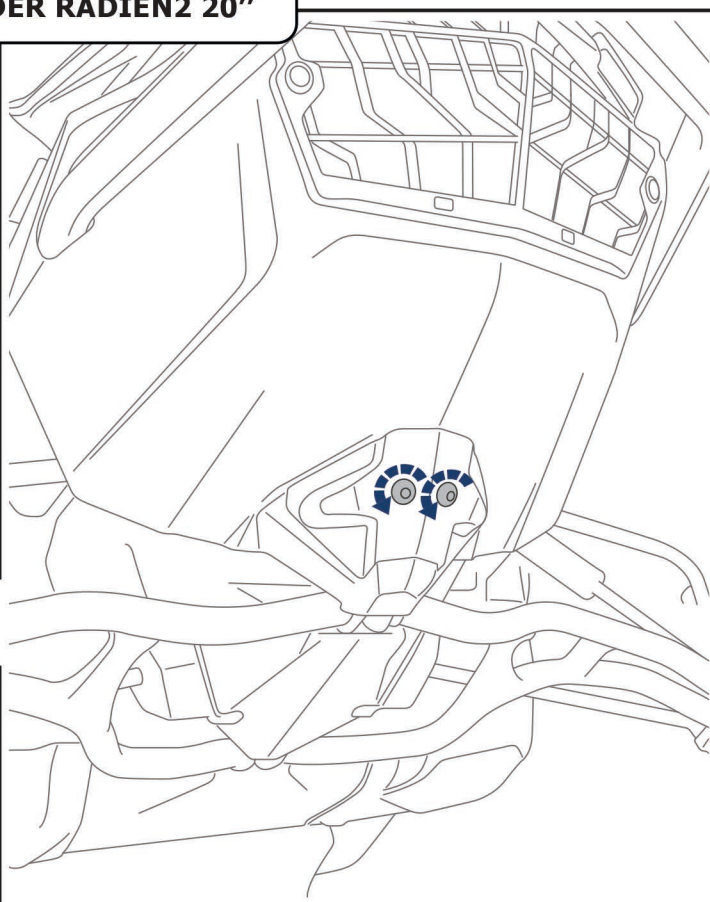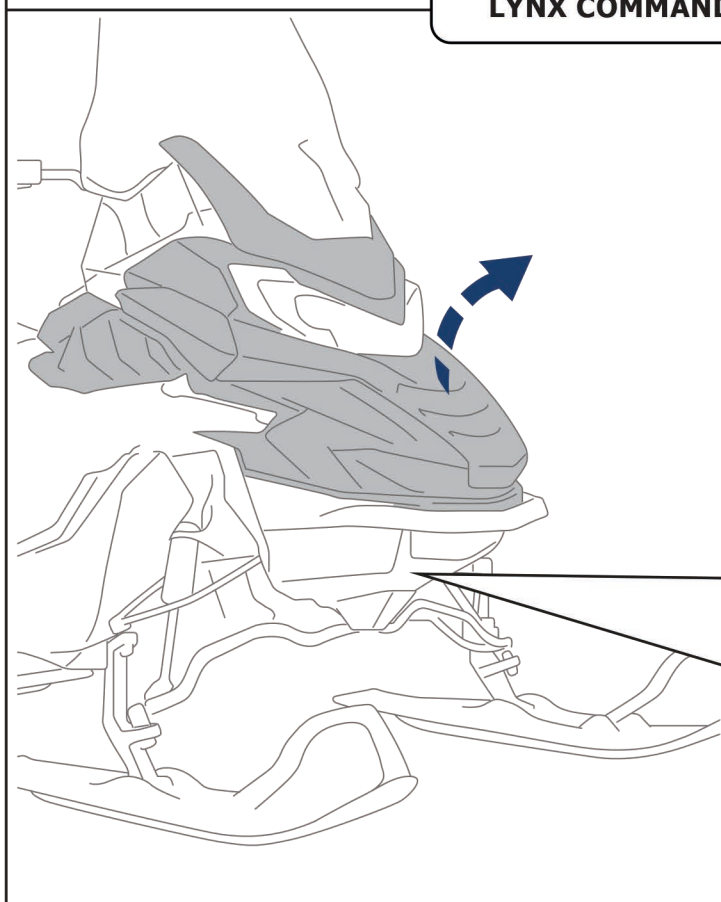

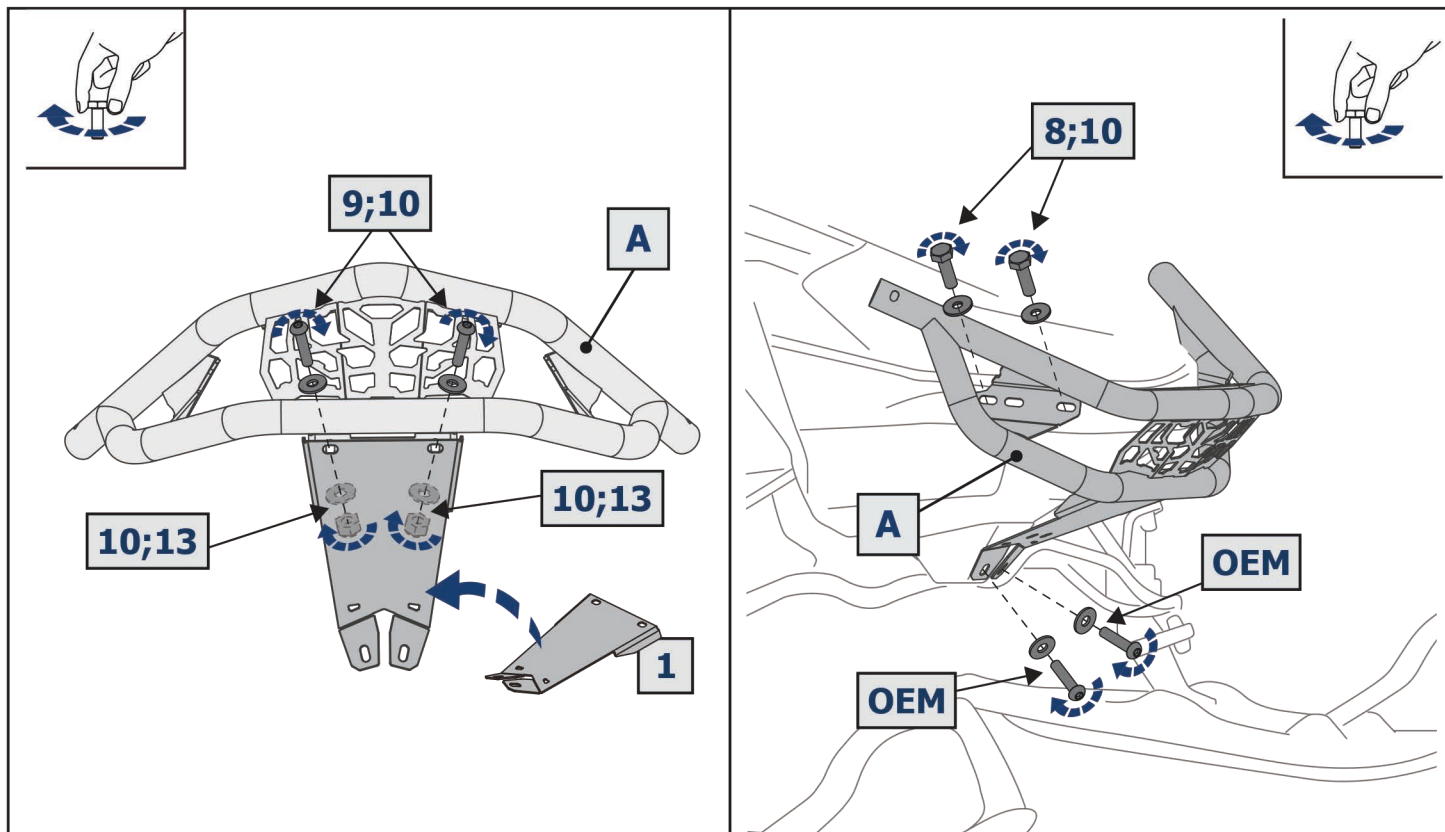

LYNX COMMANDER RADIEN2 20''


LEFT=RIGHT

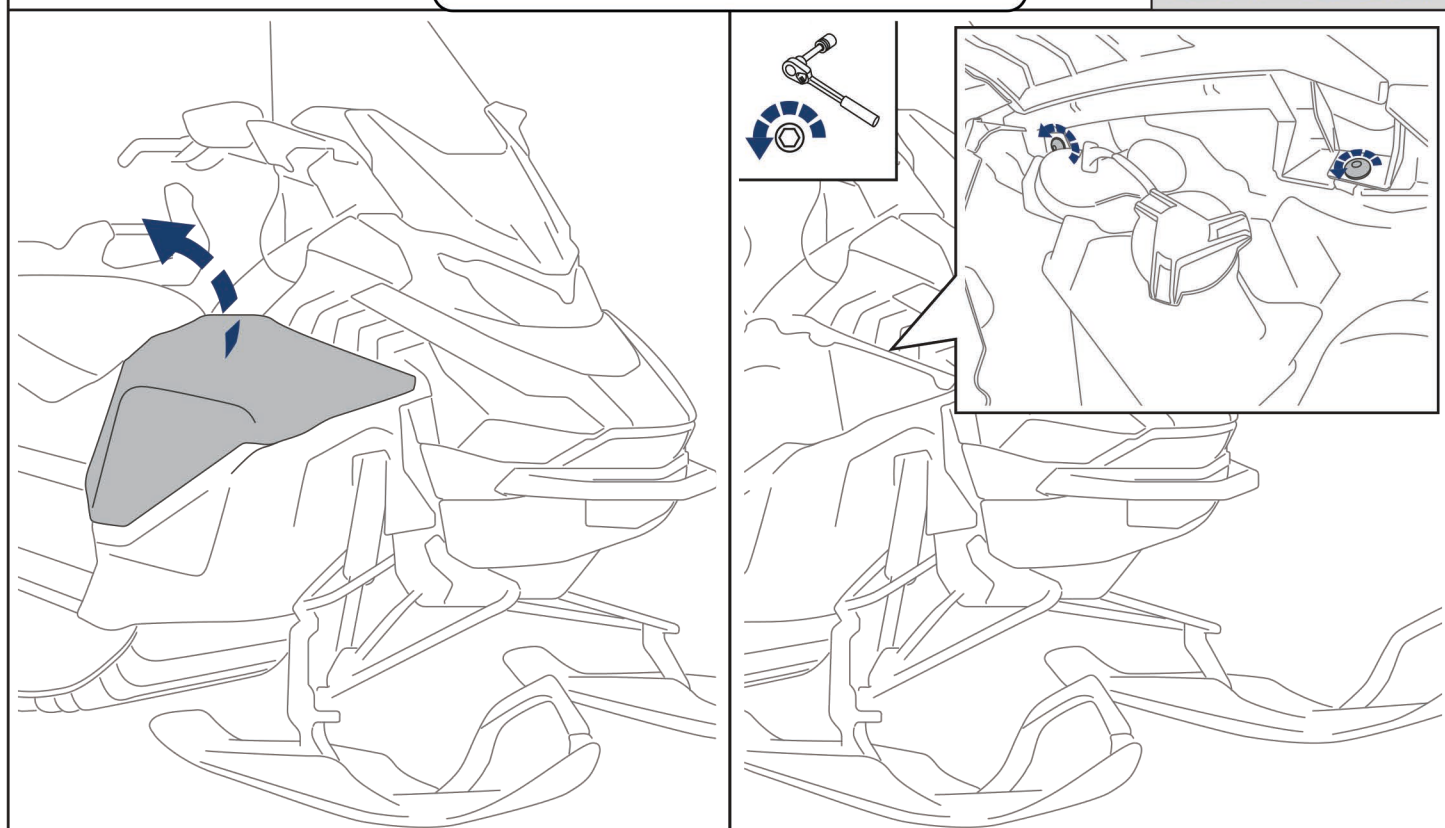


LEFT=RIGHT




SKI-DOO EXPEDITION REV GEN5 20''


LEFT=RIGHT

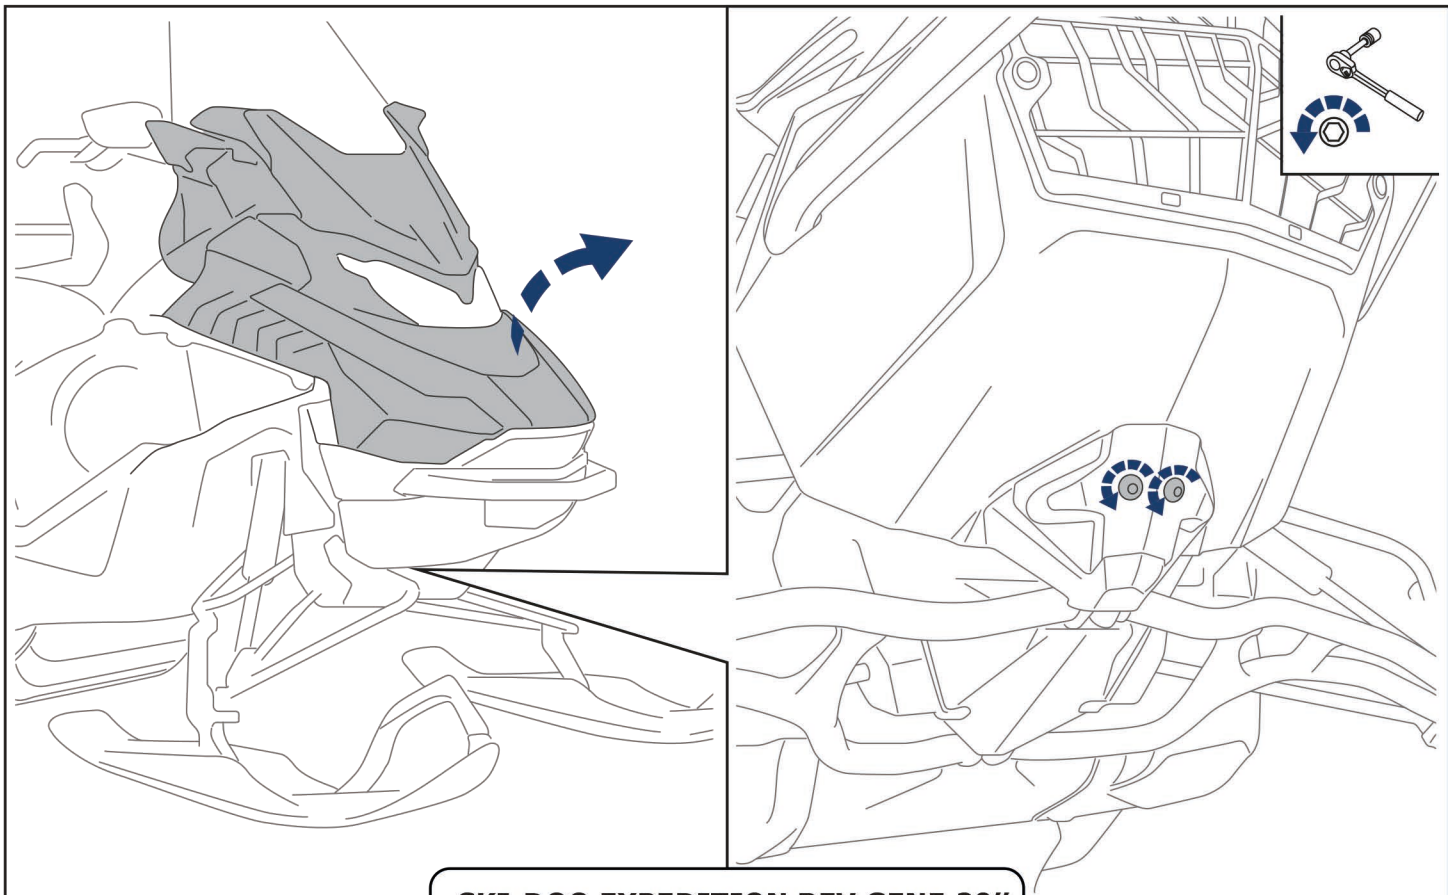


SKI-DOO EXPEDITION REV GEN5 20"

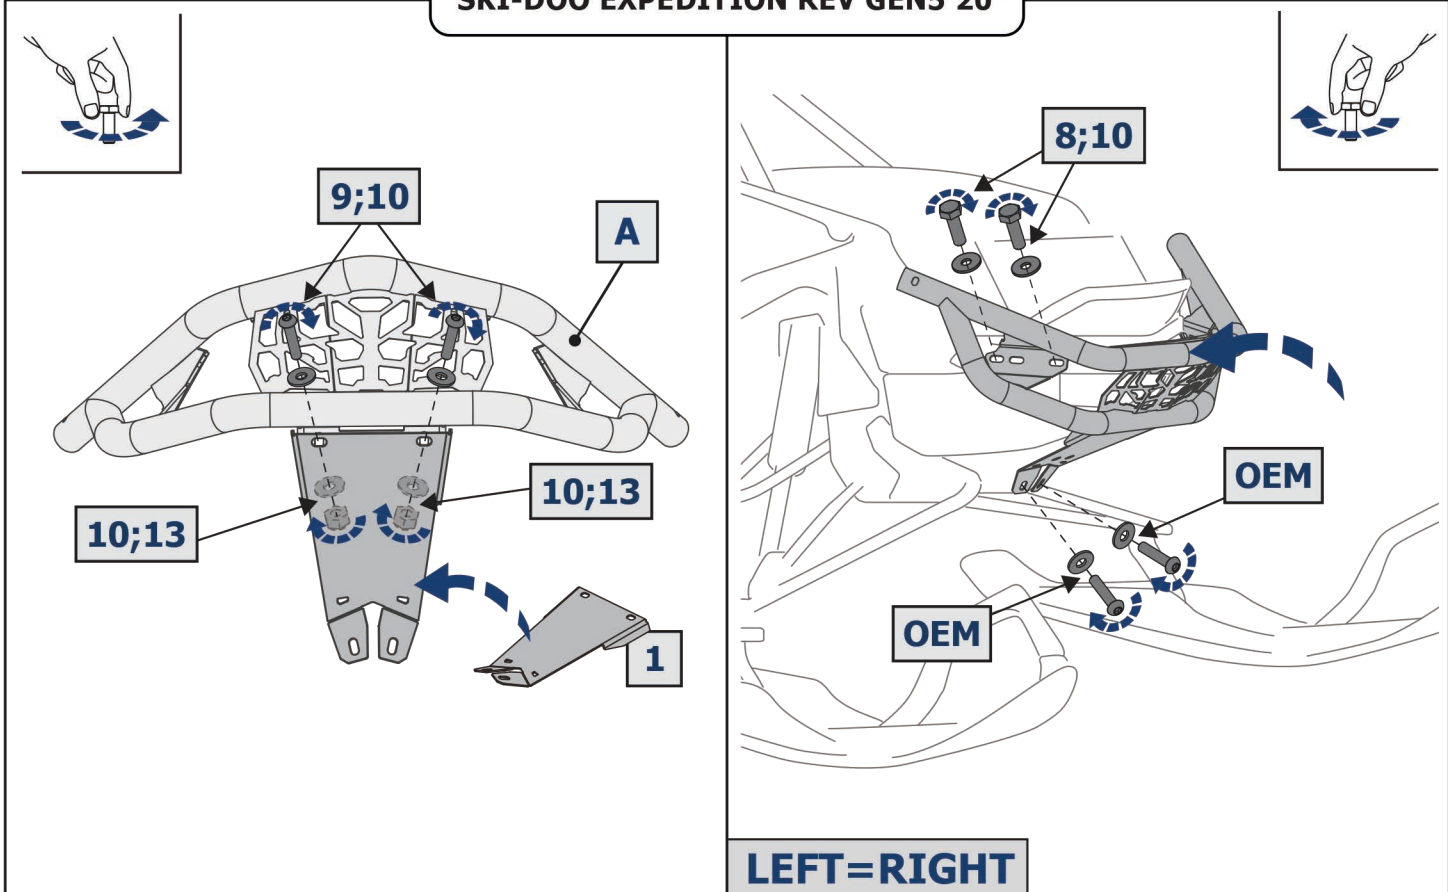

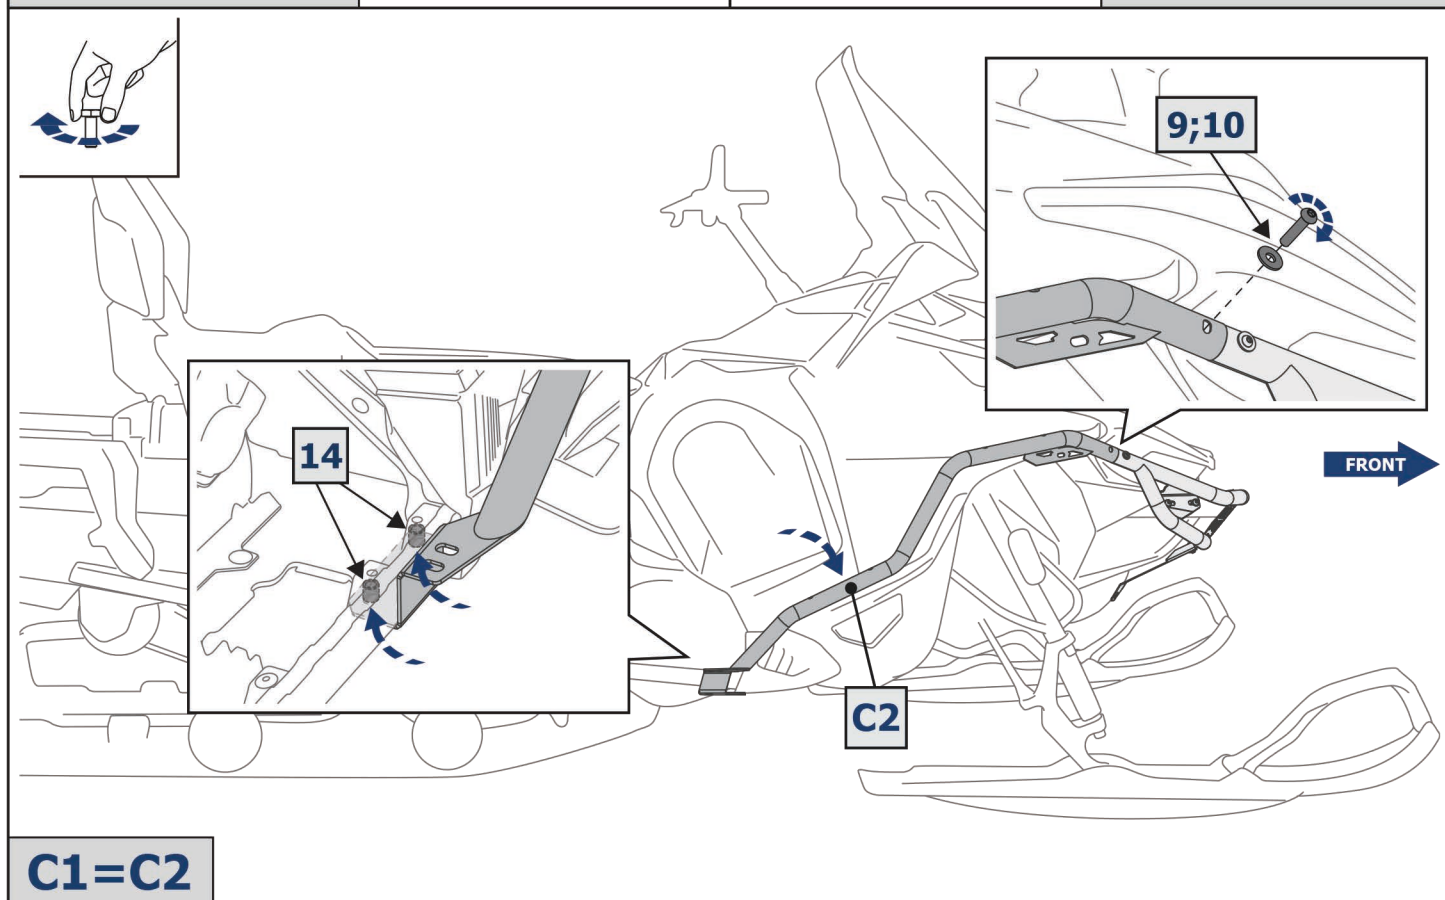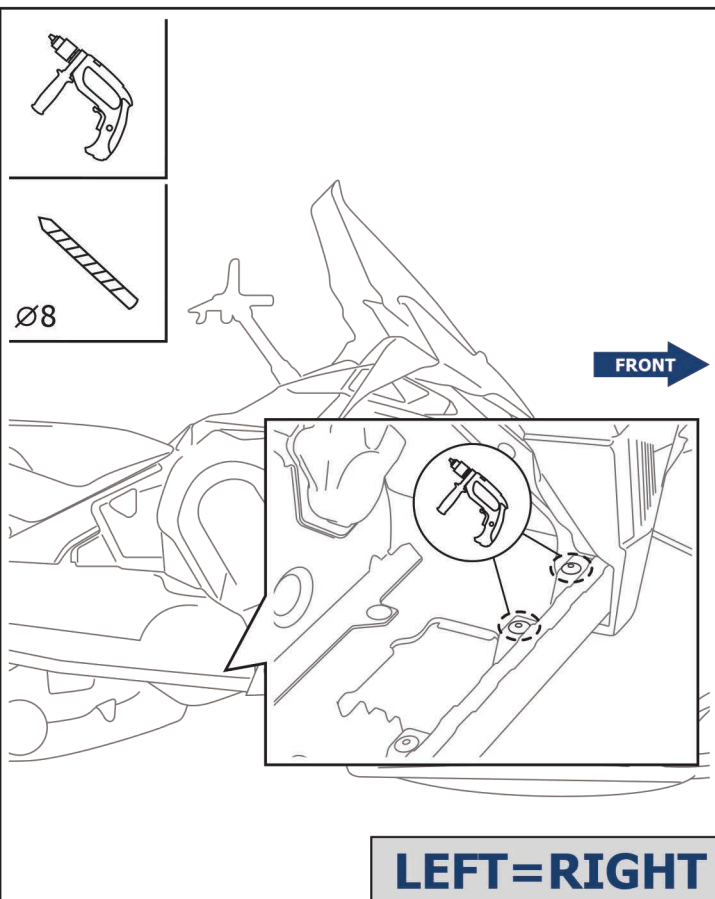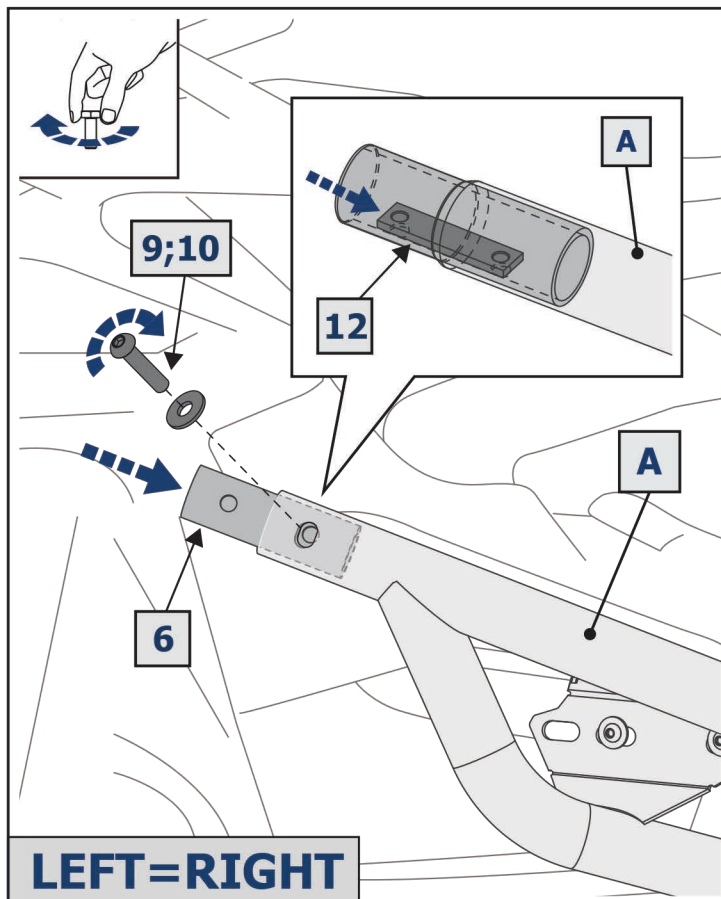


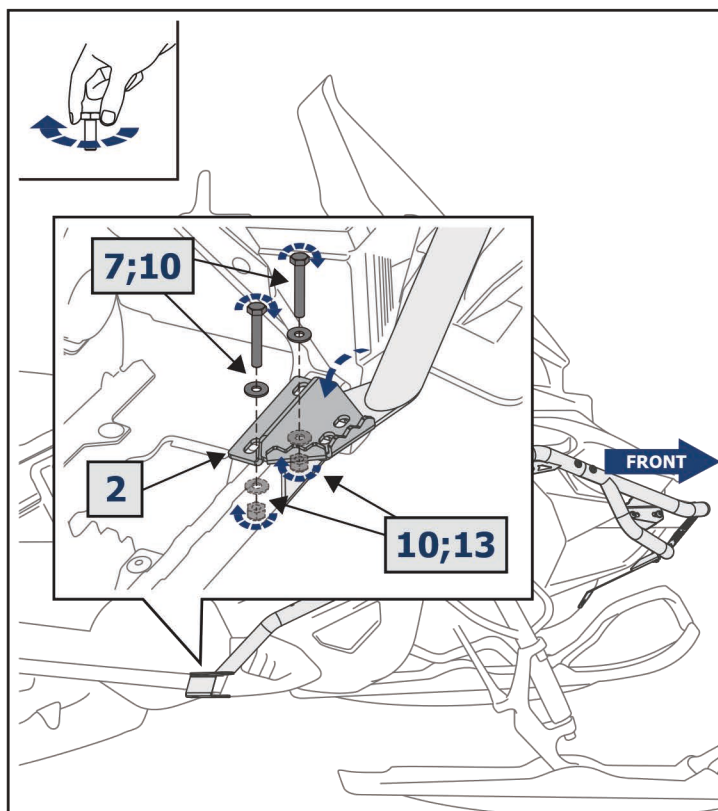

C1=C2

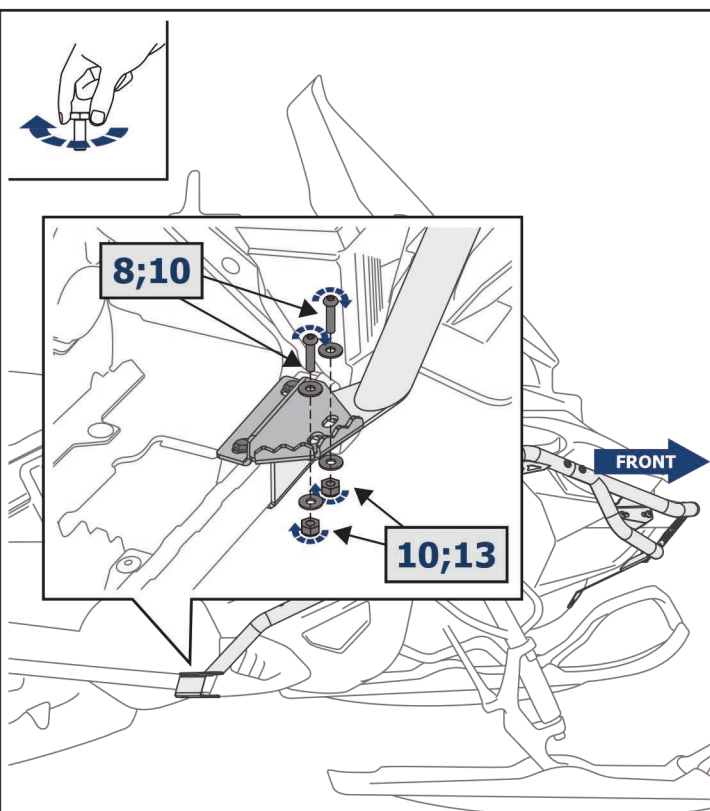


C1=C2


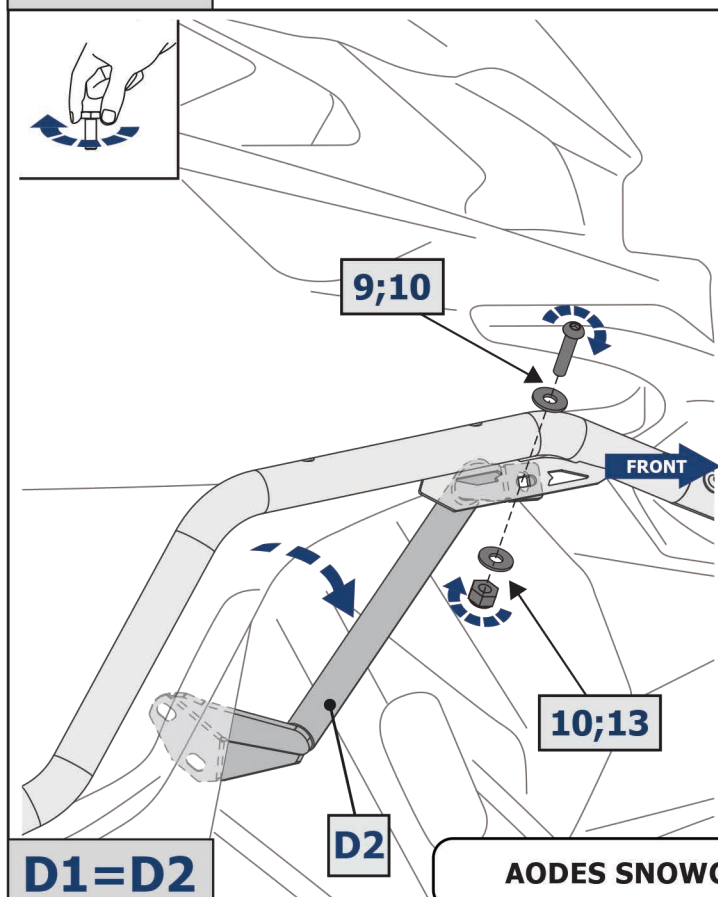



D1=D2

AODES SNOWCROSS 1000 WT

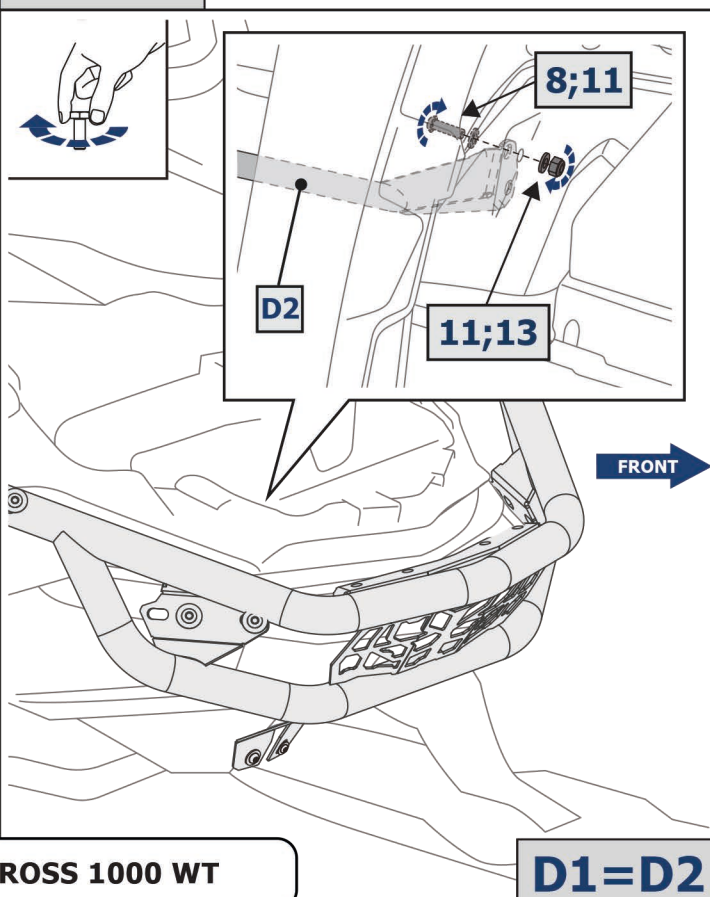

D1=D2

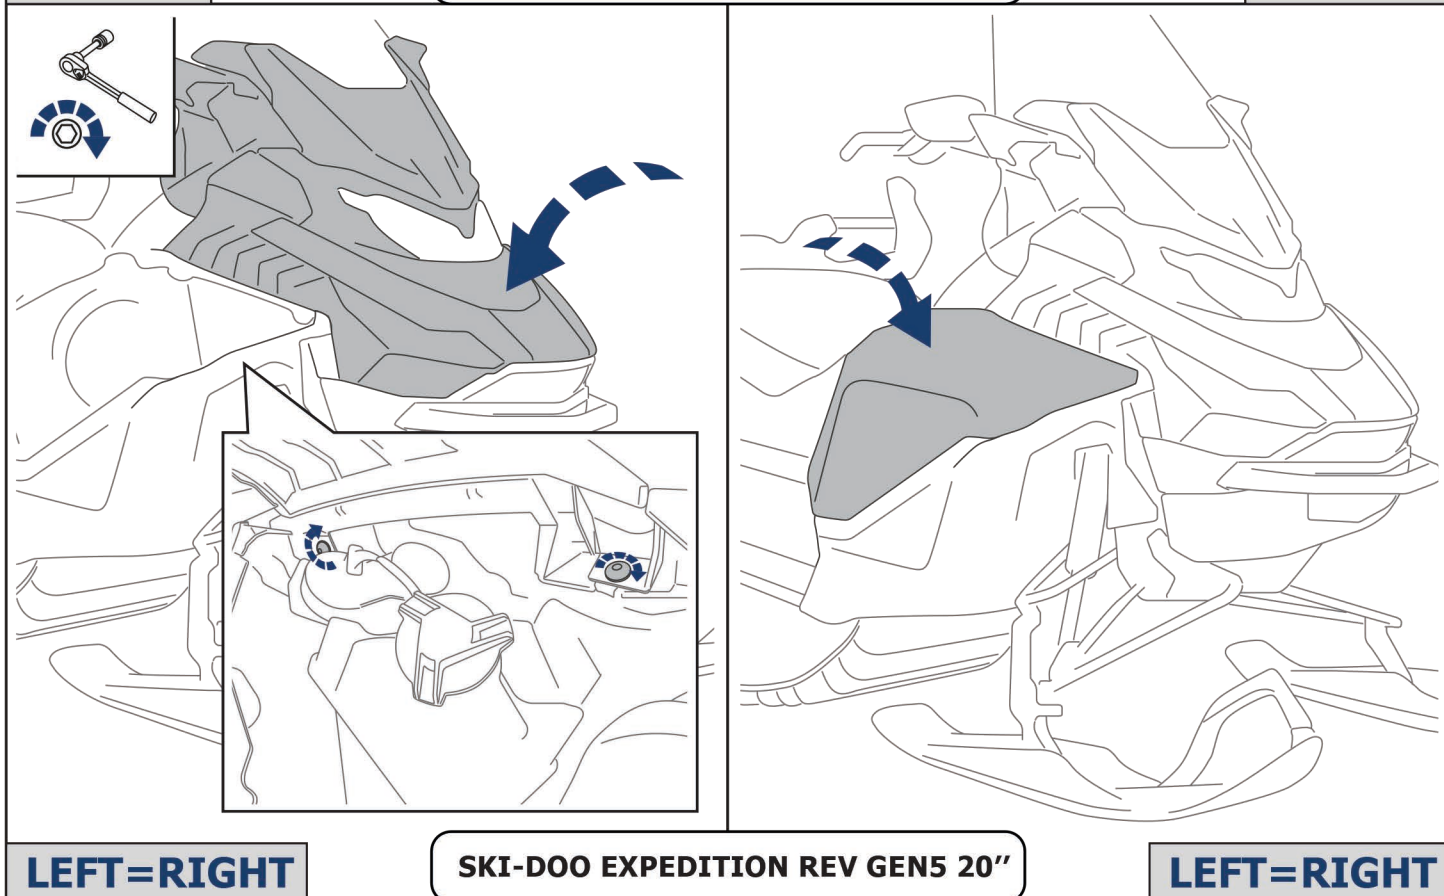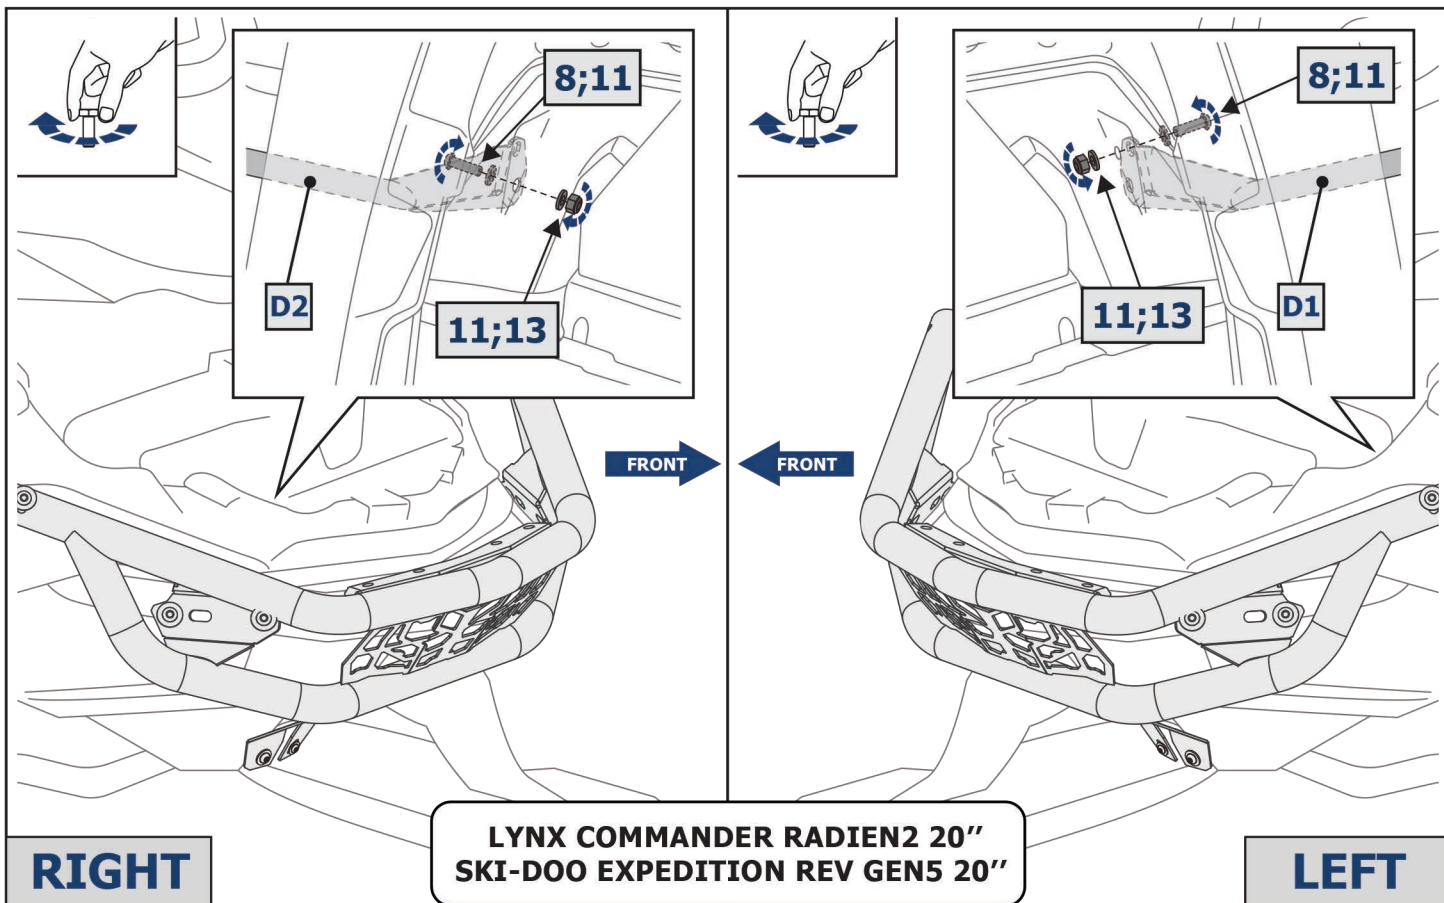


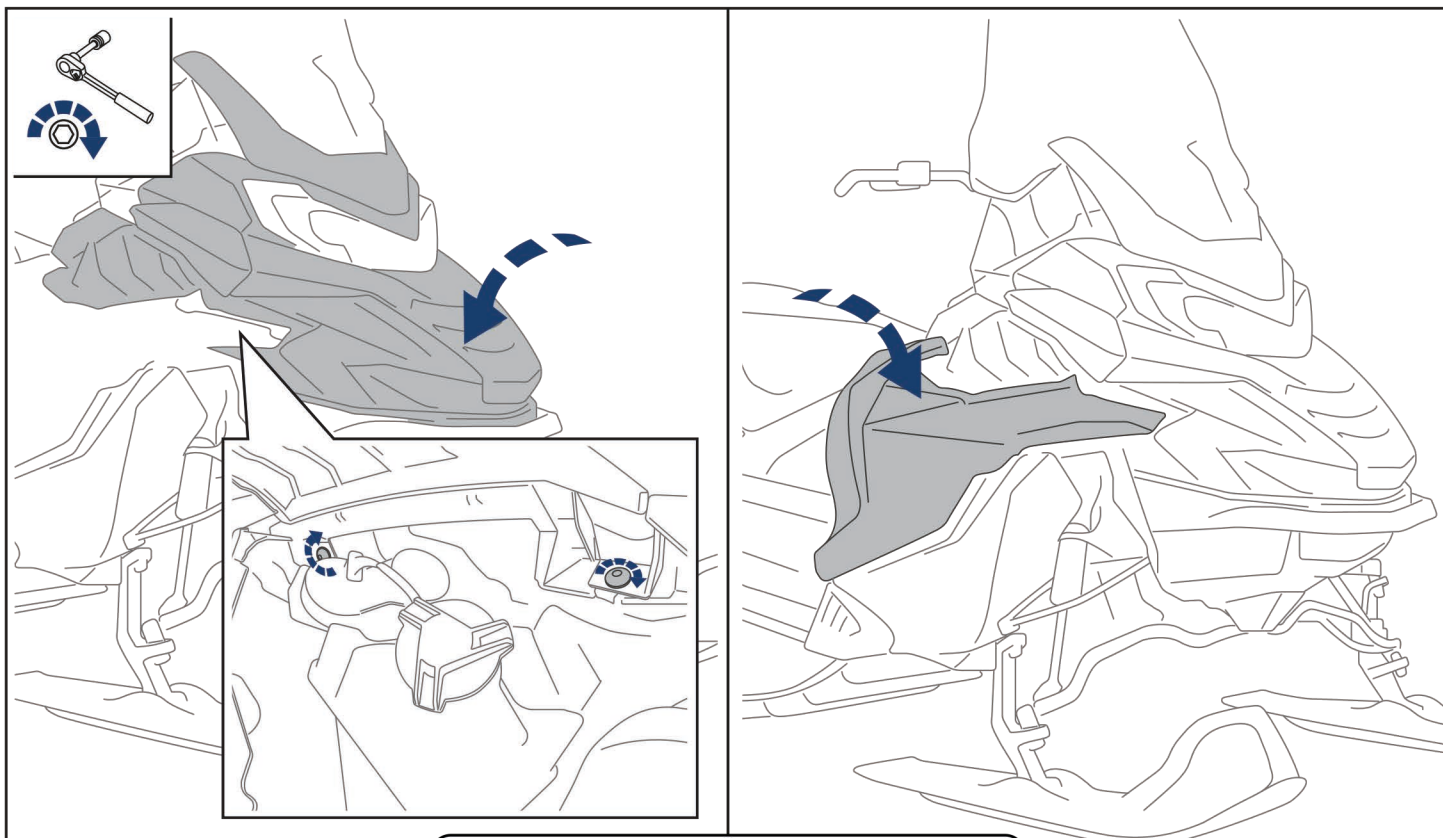


LEFT=RIGHT

LYNX COMMANDER RADIEN2 20"

LEFT=RIGHT

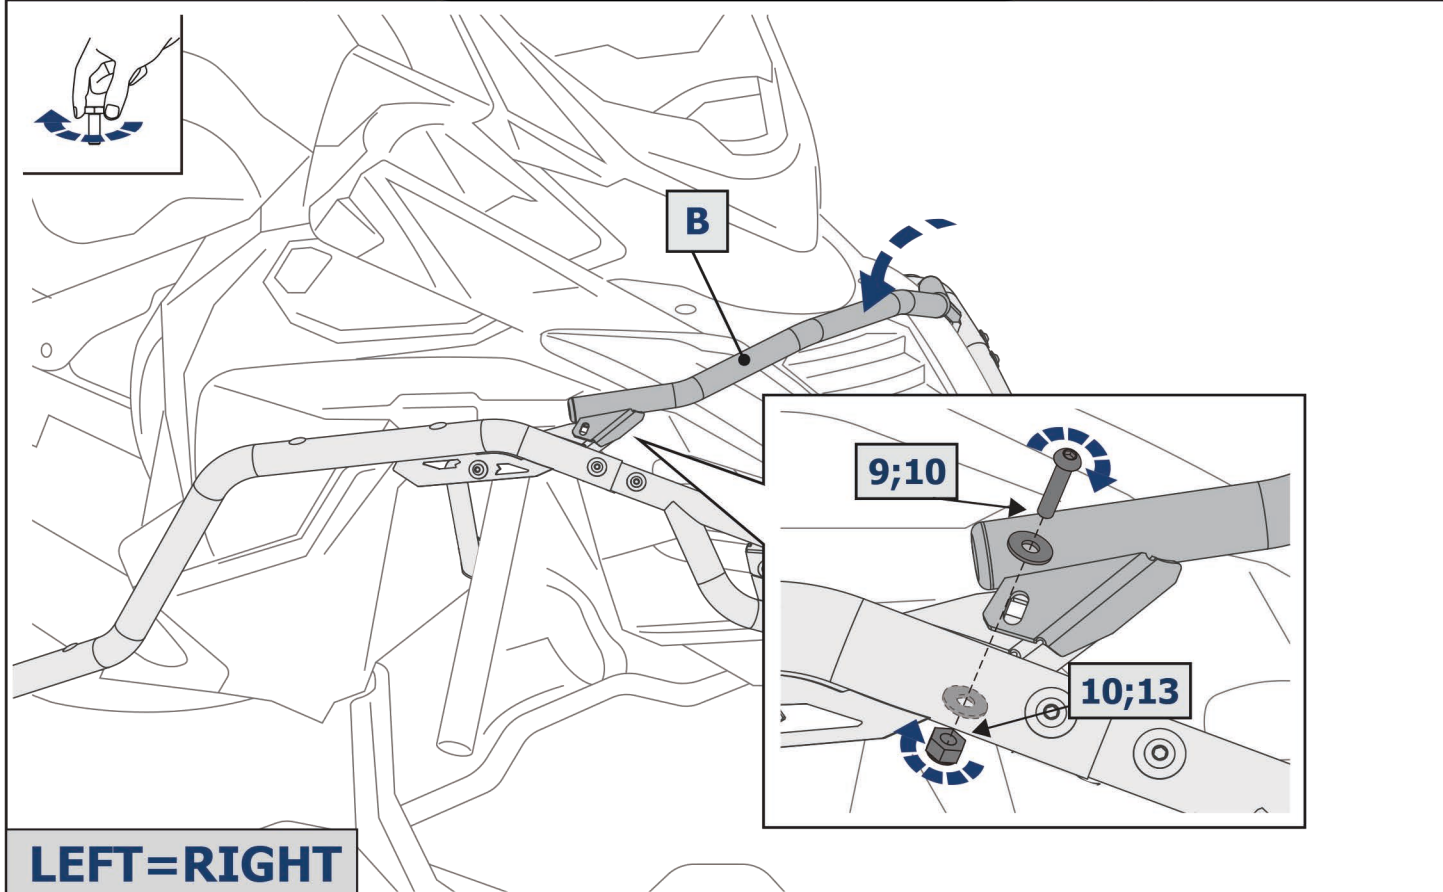

LEFT=RIGHT

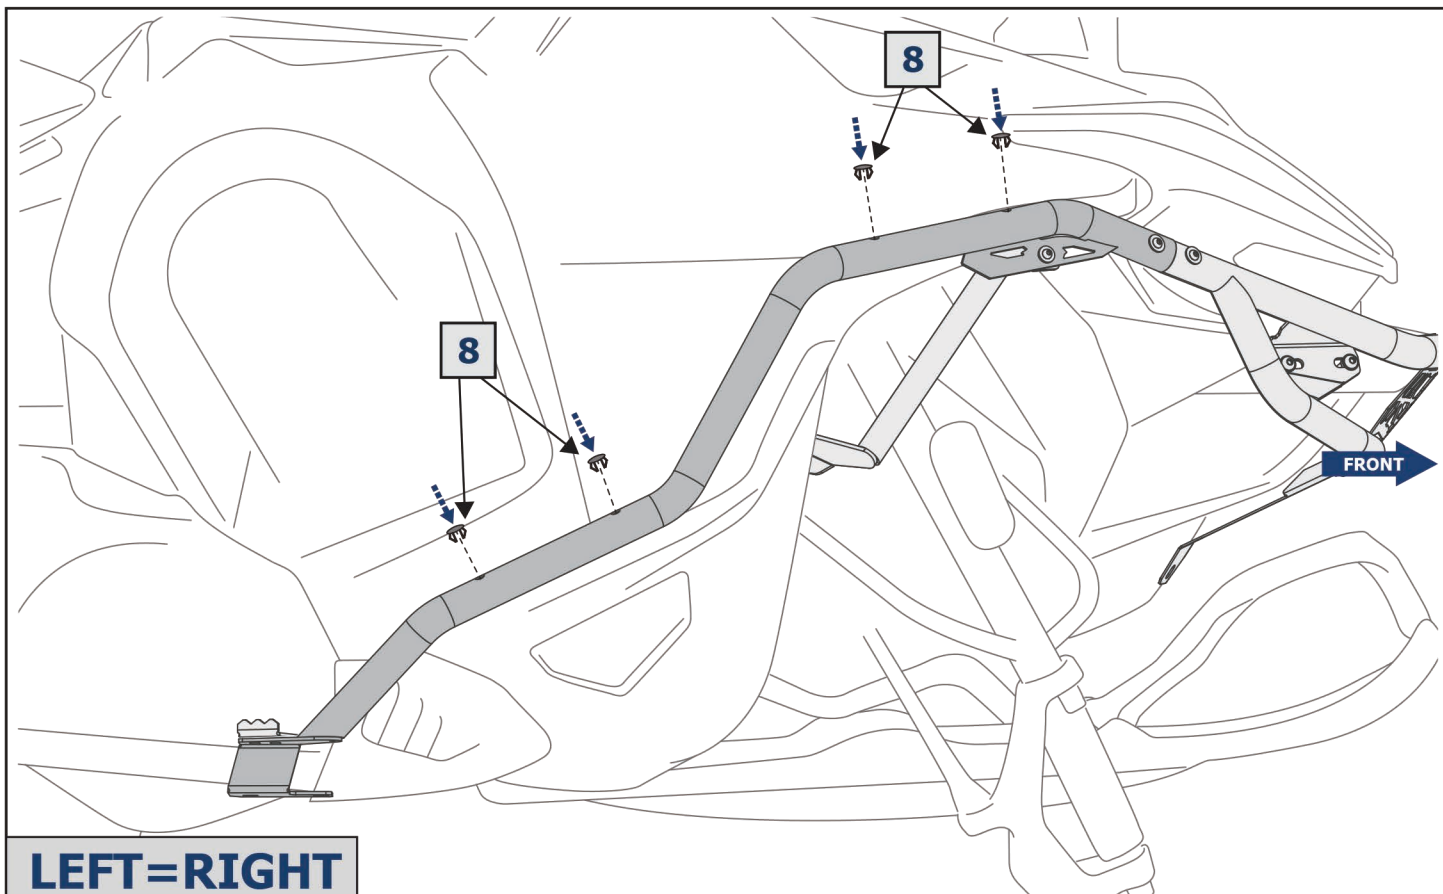

LEFT=RIGHT



M6=9.5 Nm

