

EN **SKID PLATE INSTALLATION MANUAL**



DE **MONTAGEEINLEITUNG FÜR UNTERBODENSCHUTZSYSTEM**


RU **ИНСТРУКЦИЯ ПО УСТАНОВКЕ КОМПЛЕКТА ЗАЩИТ**




For: CFmoto Zforce 1000 Sport (2020 -)

2444.8110.1 ; 444.8110.1




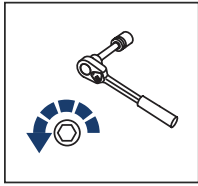


EN Regular fasteners
DE Schraube herausdrehen
RU Штатный крепеж

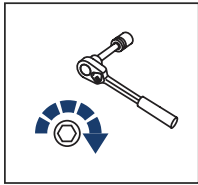


EN Regular fasteners
DE Schraube eindrehen und festziehen
RU Штатный крепеж

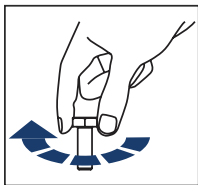


EN Screw a several turns
DE Schraube wenige Umdrehungen eindrehen
RU Вкрутить на несколько оборотов

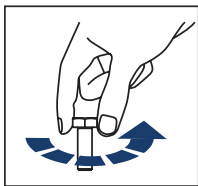

EN Loosen bolts
DE Schraube wenige Umdrehungen lösen
RU Выкрутить на несколько оборотов

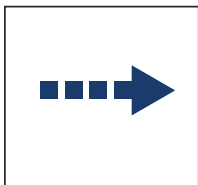

EN Movement Arrow
DE Bewegungsrichtung
RU Движение

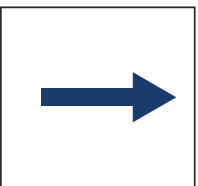




















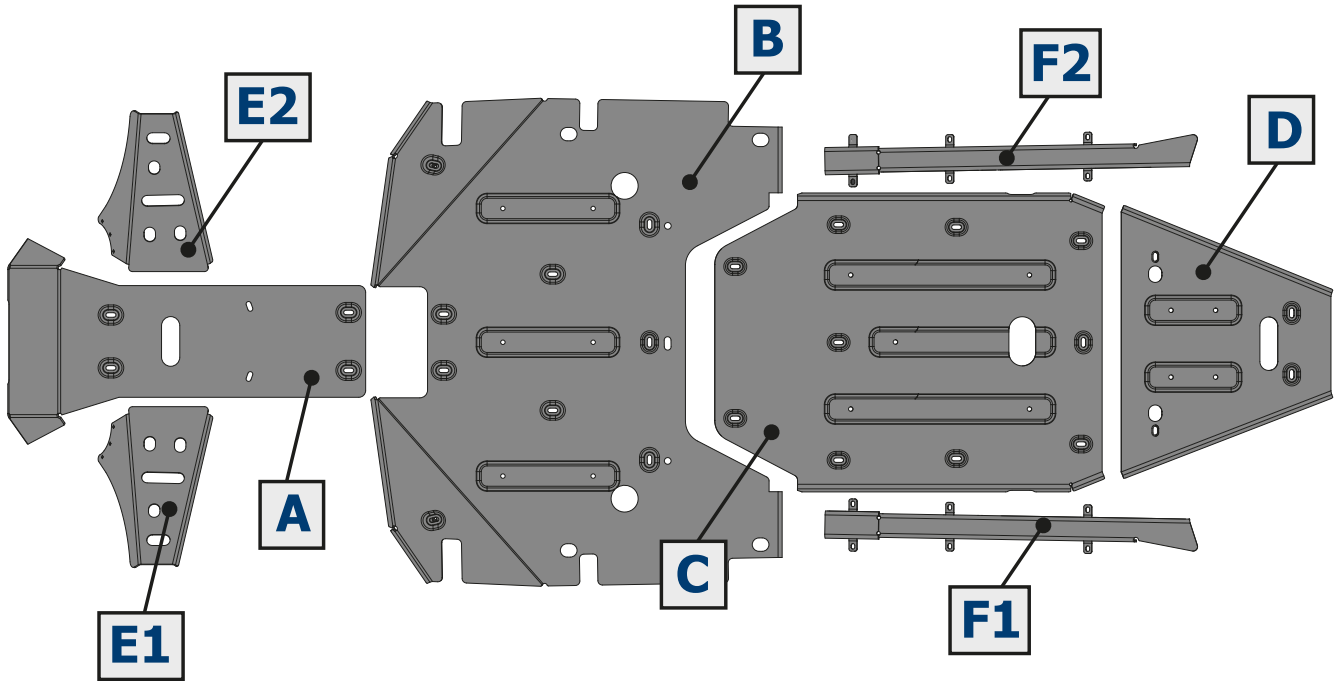


EN Location/Position Arrow
DE Blickrichtung / Postionsrichtung
RU Расположение



EN Screw Arrow
DE Drehrichtung
RU Поворот

	EN Ratchet DE Ratsche RU Трещётка		S - 10; S - 13		HEX S - 4; S - 5
---	---	---	-------------------	--	------------------------



1  x1	2  x1	3  x6	4  x1	5  x1	6  M8 x2
7  M6x16 x6	8  M10x20 x2	9  M6x20 x27	10  M6x70 x2	11  M8x20 x27	12  M6 x6
13  M8 x12	14  M10 x2	15  x2	16  Ø6 x30	17  Ø8 x27	18  Ø6 x4
19  Ø8 x8	20  x1	21  x1			

